

پخش کنندوی دی

رفتر چه راهنما

امکانات را تصور کنید

از شما برای خرید محصول سامسونگ تشکر می‌کنیم
برای دریافت سرویس کامل‌تر، لطفاً محصول خود را در آدرس زیر
ثبت کنید

www.samsung.com/global/register

احتیاطها

۱. برپا ساختن

- جهت ولتاژ عملیاتی صحیح به برچسب شناسایی که در پشت پخش کننده قرار گرفته است مراجعه کنید.
- پخش کننده را در قفسه ای قرار دهید که دارای سوراخهای تهویه مناسب باشد. (۷ تا ۱۰ سانتیمتر) سوراخهای تهویه در هیچکدام از اجزاء را برای گردش هوا مسدود نکنید.
- دیسک را با دست در سینی دیسک فشار ندهید.
- اجزاء را روی یکدیگر قرار ندهید.
- قبل از جابجا کردن پخش کننده مطمئن شوید که تمامی اجزاء را خاموش کرده اید.
- قبل از وصل کردن اجزاء دیگر به این پخش کننده، مطمئن شوید که آنها را خاموش کرده اید.
- **مؤرخانه اصلی دستگاه بعنوان یک وسیله قطع کننده به کار برده می شود لذا موقعیت آن باید برای استفاده به آسانی در دسترس باشد.**

۲. برای ایمنی خود

- این محصول از یک لیزر استفاده می کند. استفاده از کنترلها با این محصول از یک لیزر استفاده می کند. استفاده از کنترلها با تنظیمات و اجرای روشهایی بجز آثانی که در اینجا مشخص شده است ممکن است منجر به در معرض قرار گرفتن تشعشعات خطرناک گردد.
- روکشها را باز نکنید و خود دستگاه را تعمیر نکنید.
- برای سرویس کردن به پرسنل تایید شده مراجعه کنید.

۳. احتیاط

- پخش کننده شما برای مصارف خانگی است و برای استفاده صنعتی مناسب نمی باشد. از این دستگاه فقط برای استفاده شخصی استفاده کنید.
- **دستگاه نباید در معرض ریزش قطرات یا پاشیده شدن مایعات قرار گرفته و نباید هیچ شیء پر شده از مایعات مانند گلن، روی دستگاه قرار داده شود.**
- عوامل خارجی مانند روشنایی و الکتریسیته ساکن می تواند روی عملیات عادی این دستگاه تاثیر بگذارد. اگر این اتفاق افتاد پخش کننده را با دکمه POWER خاموش و روشن کنید، یا سیم برق AC دستگاه را از پریز برق قطع کرده و دوباره وصل کنید. پخش کننده بطور عادی کار خواهد نمود.
- هنگامی که بخاطر تغییر ناگهانی درجه حرارت بخار در دستگاه جمع می شود، پخش کننده ممکن است درست کار نکند. اگر این اتفاق افتاد، پخش کننده را در درجه حرارت اتاق رها کنید تا داخل دستگاه خشک شده و برای کار آماده شود.

۴. دیسک

- از اسپرهای تمیز کننده صفحه، بنزن، تینر یا سایر حلالهای فرار که ممکن است به سطح دیسک صدمه رسانند استفاده نکنید.
- سطح سیکنال دیسک را لمس نکنید. دیسک را از لبه ها یا یک لبه و سوراخ مرکزی نگاه دارید.
- گرد و غبار را بپوش می پاک کنید؛ هرگز پارچه را روی دیسک بچلو و عقب نکشید.

۵. اطلاعات زیست محیطی

- باتری استفاده شده در این محصول حاوی مواد شیمیایی است که برای محیط زیست مضر می باشند.
- بنابراین، باتریها را به روش صحیح، بر اساس مقررات دولتی، ایالتی و محلی بدور بریزید.

هه‌ای‌نی نفع خاصی مجوز


محصولی که به‌همراه این راهنمای کاربر آمده است تحت حقوق مالکیت عقلانی گرابی برای محتویات مجوز داده شده محدود می‌شود. هیچ حقوقی برای استفاده تجاری اعطا نشده است. مجوز هیچ محصول دیگری بغیر از این محصول را در بر نمی‌گیرد و مجوز به هیچ دستگاه یا عمل بی مجوز که بر اساس ISO/OUR 11172-3 یا ISO/OUR 13818-3 همراه این دستگاه استفاده شده یا همراه این دستگاه فروخته می‌شود مربوط نمی‌گردد. مجوز فقط استفاده از این دستگاه برای رمزگذاری و/یا رمزگشایی فایل‌های صوتی مطابق استاندارد ISO/OUR 11172-3 یا ISO/OUR 13818-3 را پوشش می‌دهد. هیچ حقوقی برای ویژگی‌های محصول یا عملکردهایی که بر اساس استانداردهای ISO/OUR 11172-3 یا ISO/OUR 13818-3 نمی‌باشند در نظر گرفته نشده است.

قبل از شروع

لوازم جانبی



کنترل از راه دور

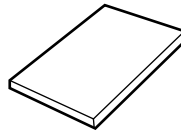

راهنمای استفاده کننده



کابل ویدئو/صدا


لوازم جانبی ارائه نشده

- باتریهای کنترل از
- کابل کو اکسیال
- کابل کامپوننت

باتریها را در کنترل از راه دور نصب کنید.

۱

روکش باتری در پشت کنترل از راه دور را باز کنید.

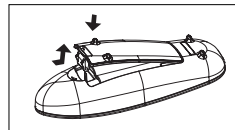

۲

باتریهای AAA را نصب کنید. مطمئن شوید که قطبهای باتری (+ و -) بطور صحیح قرار داده شده اند.

۳

روکش باتری را جا بزنید.

اگر کنترل از راه دور بطور صحیح عمل نمی کند موارد زیر را بررسی کنید:

- قطب + - باتریها را بررسی کنید (باتری خشک)
- خشک شدن باتریها را بررسی کنید.
- مسدود شدن حسگر کنترل از راه دور توسط موانع را بررسی کنید.
- بررسی کنید که آیا منبع روشنایی فلورسنت در نزدیکی وجود دارد.

فهرست مطالب

۲	احتیاطها
۳	قبل از شروع
	تنظیم
۴	ویبکیهای عمومی
۵	نوع و مشخصات دیسک
۶	شرح
۸	گشتی در کنترل از راه دور
	اتصالات
۹	انتخاب یک اتصال
	عملکردهای اصلی
۱۴	پخش کردن یک دیسک
۱۵	استفاده کردن از عملکردهای جستجو و پرش
۱۵	استفاده کردن از عملکردهای نمایش
۱۶	استفاده کردن از منوی یسکو عنوان
۱۶	پخش تکراری
	عملکردهای پیشرفته
۱۷	تنظیم کردن در جابزرگنمایی (نمای EZ)
۱۸	انتخاب کردن زبان صدا
۱۸	انتخاب کردن زبان زیر نویس
۱۹	تغییر دادن زاویه دید
۱۹	استفاده کردن از عملکردهای نشانگذاری
۲۰	استفاده کردن از عملکرد بزرگنمایی
۲۰	منوی قطعات MPEG4/JPEG/WMA/MP3
۲۰	انتخاب کردن پوشه
۲۱	پخش MP3/WMA
۲۲	پخش MPEG4
	تغییر دادن منوی تنظیم
۲۴	استفاده از منوی تنظیم
۲۴	تنظیم کردن ویژگیهای زبان
۲۶	تنظیم کردن گزینهای صدا
۲۷	تنظیم کردن گزینهای نمایش
۲۸	تنظیم کردن کنترل والدین
	ارتقای سفت افزار
۳۰	ارتقای سفت افزار
۳۱	عیب یابی
۳۲	مشخصات

MPEG4

این دستگاه می تواند فرمت های MPEG4 را در داخل یک فایل avi پخش کند.

تذکر

- دیسکهای که نمی توان آنها را با این پخش کننده

پخش نمود.

• DVD-ROM • DVD-RAM

• CD-ROM • CDV

• CDI • CVD

• سی دی صوتی سوپر (بجز لایه سی دی)

• فقط CDG های پخش صوت، بدون گرافیک

- توانایی پخش ممکن است به شرایط ضبط کردن

بستگی داشته باشد.

• DVD-R, +R

• CD-RW

• (حالت V) DVD+RW, -RW

- این دستگاه ممکن است دیسکهای خاصی مانند CD-R

و CD-RW را بخاطر نوع دیسک یا شرایط

ضبط، پخش نکند.

صدای عالی

دالبی دیجیتال که فن آوری توسعه یافته توسط آزمایشگاههای دالبی می باشد، صدای بسیار شفاف را تولید مجدد می نماید.

صفحه

هم فیلم معمولی و هم فیلم صفحه پهن (۱۶:۹) را می توان مشاهده کرد.

حرکت آهسته

یک صحنه مهم را می توان در حرکت آهسته مشاهده کرد.

پخش برنامه ای (CD)

می توانید تراکها را به ترتیب دلخواه برنامه ریزی کنید.

کنترل والدین (DVD)

کنترل والدین به کاربران اجازه می دهد تا سطح مورد نیاز را برای جلوگیری کودکان از مشاهده فیلمهای مضر مانند فیلمهای دارای خشونت، موضوعات مربوط به بزرگسالان و غیره، تنظیم نمایند.

عملکردهای مختلف منوی روی صفحه

می توانید زبانهای مختلف (صدا/زیرنویس) و زوایای صفحه را در حین لذت بردن از فیلمها انتخاب کنید.

اسکن تدریجی

اسکن کردن تدریجی تصویر بهبود یافته ای را بوسیله دوربین کردن خطوط اسکن نسبت به تصویر آمیخته معمولی را ایجاد می کند.

نمای EZ (دی وی دی)

نمای آسان توانایی تنظیم تصویر را برای تطابق با اندازه صفحه (۱۶:۹) را ارائه می کند.

نمایشگر عکس دیجیتال (JPEG)

می توانید عکسهای دیجیتال را در تلویزیون خود مشاهده کنید.

تکرار

می توانید یک آهنگ یا فیلم را پسادگی با فشار دادن دکمه REPEAT تکرار کنید.

MP3/WMA

این دستگاه می تواند دیسکهای ایجاد شده از فایلهای MP3/WMA را پخش کند.

حفاظت در برابر نسخه برداری

بسیاری از دیسکهای دی وی دی با حفاظت در برابر نسخه برداری رمزگذاری شده اند. بدین خاطر، شما باید پخش کننده دی وی دی خود را بطور مستقیم به تلویزیون، نه به دستگاه ویدئو، وصل کنید.

وصل کردن به ویدئو ممکن است در دیسکهای دی وی دی

حفاظت شده در برابر نسخه برداری منجر به تصویر خراب شود.

این محصول مشمول تکنولوژی محافظت حق نشر است که توسط ثبت اختراعات ایالات متحده و دیگر قوانین حقوقی که مالک آن شرکت Macrovision و سایر مالکین حقوق می باشند محافظت شده است. استفاده از این فن آوری حفاظت در برابر نسخه برداری باید توسط شرکت Macrovision باشد، و برای مصارف خانگی و سایر مصارف محدود شده در نظر گرفته شده است مگر اینکه توسط شرکت Macrovision مجاز شده باشد. مهندسی معکوس یا باز کردن یا جدا سازی ممنوع می باشد.

خروجیهای اسکن تدریجی

"مصرف کنندگان باید توجه داشته باشند که تمامی تلویزیونهای پیشرفته با این محصول بطور کامل سازگار نمی باشند و ممکن است باعث تولید اشکال در پخش تصویر شوند، در مورد مسائل تصویر ۵۲۵ یا ۶۲۵ اسکن تدریجی توصیه می شود که کاربر اتصال را به خروجی "نوع استاندارد" تغییر دهد. اگر در مورد سازگاری تلویزیون خود با مدل پخش کننده دی

وی دی ۵۲۵ سوالاتی دارید، لطفاً با مرکز

خدمات مشتریان سامسونگ تماس بگیرید."

نوع و مشخصات دیسک

این پخش کننده دی وی دی توانایی پخش دیسکهای نوع زیر همراه با نشانهای مربوطه را دارد:

انواع دیسک (نشانها)	نوع ضبط کردن	اندازه دیسک	حداکثر زمان پخش	مشخصات
دی وی دی 	صوتی + تصویری	۱۲ سانتی متر	یک طرفه ۲۴۰ دقیقه دو طرفه ۴۸۰ دقیقه	دی وی دی بخاطر دالپس دیجیتال و سیستم MPEG-2 دارای صدا و تصویر عالی می باشد. - عملکردهای صفحه و صوتی مختلف را می توان از طریق منوی روی صفحه به آسانی انتخاب کرد.
		۸ سانتی متر	یک طرفه ۸۰ دقیقه دو طرفه ۱۶۰ دقیقه	
سی دی ویدئویی 	صوتی + تصویری	۱۲ سانتی متر	۷۴ دقیقه	- ویدئو با صدای سی دی، کیفیت VHS و فن آوری فشرده سازی MPEG-1.
		۸ سانتی متر	۲۰ دقیقه	
سی دی صوتی 	صوتی	۱۲ سانتی متر	۷۴ دقیقه	- سی دی بصورت دیجیتال با کیفیت صوتی بهتر، اعواج کمتر و افت کیفیت صوتی کمتر در اثر مرور زمان، ضبط شده است.
		۸ سانتی متر	۲۰ دقیقه	

شماره منطقه

هم پخش کننده دی وی دی و هم دیسکها بصورت منطقه ای کد گذاری شده اند. این کدهای منطقه ای باید برای پخش دیسک باید با یکدیگر مطابقت داشته باشد. اگر کدها با یکدیگر منطبق نباشد، دیسک پخش نخواهد شد.

شماره منطقه این پخش کننده در پانل پشت پخش کننده شرح داده شده است.

جواز DivX



DivX، DivX مجاز و مارکهای مربوطه علائم تجاری DivXNetworks، Inc بوده و از آنها تحت امتیاز استفاده می شود.

علائم دیسک

شماره منطقه پخش	
سیستم پخش PAL در بریتانیا، فرانسه، آلمان و غیره	
دیسک دالبی دیجیتال	
دیسک استریو	
دیسک صوتی دیجیتال	
دیسک DTS	
دیسک MP3	

شما باید در هر بار یک دیسک دی وی دی را جای گذاری کنید. جای گذاری کردن دو دیسک یا بیشتر اجازه پخش آنان را نمی دهد و ممکن است به پخش کننده دی وی دی آسیب برساند.

کنترل‌های پانل جلو



۰۳ نمایشگر

نشانگرهای عملیات در اینجا نمایش داده می‌شوند.

۰۴ (■) (توقیف/پخش/بسته)

پخش دیسک دامتوقف می‌کند/ویازدن یا بستن سینی دیسک آن را فشار دهید.

۰۵ (▶||) پخش/مکث

پخش دیسک را شروع کرده یا مکث می‌دهد.

۰۱ (⏻) STANDBY/ON

روشن/خاموش کننده روشن/خاموش می‌شود.

۰۲ سینی دیسک

دیسک دات اینجا قرار دهید.

نمایشگر پانل جلو




زمان کل پخش / نمایش پیامهای مختلف در مورد عملیاتی مانند پخش، توقف، بارگذاری

nodISC: دیسکی بارگذاری نشده است.

OPEN: سینی دیسک باز است.

LOAD: پخش کننده در حال بارگذاری اطلاعات دیسک است.

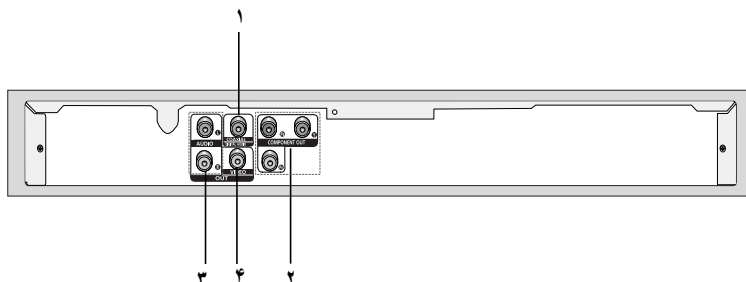

۱. فیشهای خروجی صوت دیجیتال

- برای وصل کردن يك وسیله صوتی Dolby Digital سازگار، از کابل کوآکسیال دیجیتال استفاده می شود.
- برای وصل کردن آمپلیفایر A/V که دارای دالهی دیجیتال، MPEG2 یا دیکودر DTS است از کابلهاي کوآکسیال دیجیتال استفاده کنید.

۲. فیشهای خروجی ویدئو COMPONENT

- اگر فیشهای ورودی ویدئوی Component دارید از این فیشها استفاده کنید. این فیشها PB, PR و ویدئوی Y را ارائه می کنند. اگر خروجی ویدئوی Component (P-SCAN) در منوی تنظیم انتخاب شده باشد، حالت اسکن تدریجی کار خواهد نمود.
- اگر خروجی ویدئوی Component (I-SCAN) در منوی تنظیم انتخاب شده باشد، حالت اسکن آمیخته کار خواهد نمود.


۳. فیشهای خروجی صوتی

- به فیشهای ورودی صوتی تلویزیون یا رادیو/گیرنده خود وصل کنید.

تذکر

- به راهنمای کاربر تلویزیون رجوع کنید تا معلوم شود که آیا تلویزیونتان از اسکن پیشرفته (P-SCAN) حمایت می کند. اگر اسکن تدریجی پشتیبانی می شود، تنظیمات اسکن تدریجی دفترچه در راهنمای کاربر تلویزیون خود را در منوی سیستم تلویزیون دنبال کنید.
- به صفحات ۲۶-۲۷ مراجعه کنید تا اطلاعات بیشتر در مورد روش استفاده از منوی تنظیم را بدست آورید.

۱. **دکمه POWER** دی وی دی
برق دستگاه را روشن خاموش می کند.
۲. **دکمه REPEAT**
بشما اجازه می دهد تا یک عنوان، فصل، تر اکس
دیسک را تکرار کنید.
۳. **دکمه DISC MENU**
منوی دیسک دار وی صفحه ظاهر می کند.
۴. **دکمه BOOKMARK**
۵. **دکمه (■) STOP**
۶. **دکمه های (◀/▶) SKIP**
برای پرش از عنوان، فصل یا تر اکس استفاده کنید.
۷. **دکمه MENU**
منوی پیش رو کننده دی وی دی را وی صفحه می آورد.
۸. **دکمه های ENTER / ▲/▼, ◀/▶**
این دکمه ها عنوان یک سوپرجامان عملی کند.
۹. **دکمه AUDIO (◀)**
از این دکمه برای دسترسی به عملگرهای مختلف
صوتی در یک دیسک استفاده کنید.
۱۰. **زر INFO**
لرزش وضع القرص الحالي..
۱۱. **دکمه (▲) OPEN/CLOSE**
برای باز کردن یا بستن سینی دیسک از فشار دهید.
۱۲. **دکمه REPEAT A-B**
بشما امکان می دهد تا دیسک A-B را دوبار پخش کنید.
۱۳. **دکمه ZOOM**
۱۴. **دکمه VIDEO SEL.**
فرمت خروجی تصویر را انتخاب می کند.
۱۵. **دکمه های (◀/▶) SEARCH**
بشما اجازه می دهد تا جستجو بجلو/عقب را در
دیما انجام دهید.
۱۶. **دکمه های (▶||) PLAY/PAUSE**
برای باز کردن یا بستن سینی دیسک از فشار دهید.
۱۷. **دکمه (▲) SUBTITLE**
۱۸. **دکمه RETURN**
به منوی قبلی بازمی گردد.
۱۹. **دکمه TITLE MENU**
۲۰. **دکمه CANCEL**
برای پاک کردن منو یا نامهای وضعی در صفحه.

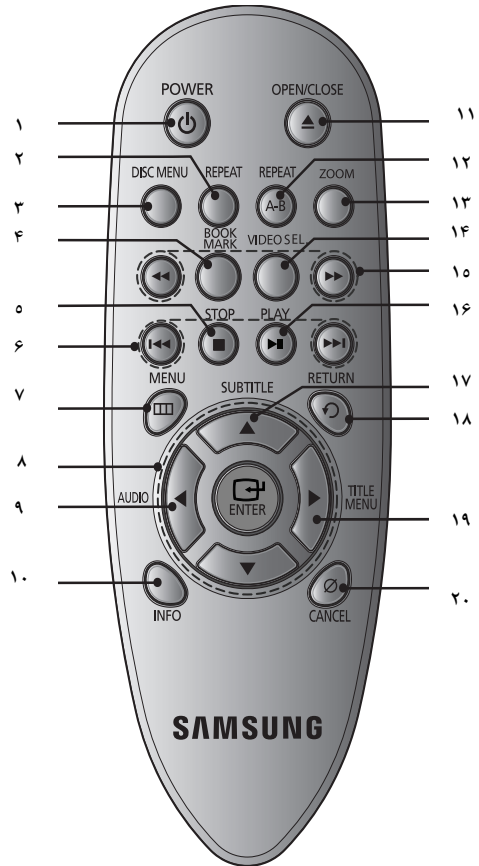


انتخاب یک اتصال

موارد زیر نمونه هایی از اتصالات معمول استفاده شده برای اتصال پخش کننده دی وی دی به تلویزیون و سایر دستگاهها را نمایش می دهد.

قبل از وصل کردن پخش کننده دی وی دی

- قبل از وصل کردن یا جدا کردن هر گونه کابلی، پخش کننده دی وی دی و سایر دستگاههای را خاموش کنید.
- به راهنمای کاربر اجزاء اضافی (از قبیل تلویزیون) که به آن وصل می کنید برای اطلاعات بیشتر در مورد آن اجزاء خاص رجوع شود.

اتصال به تلویزیون (ویدئو)

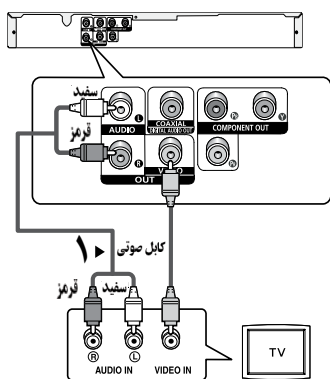

۱

با استفاده از کابلهای ویدئویی/صوتی، ترمینالهای (قرمز و سفید) AUDIO OUT / (زرد) VIDEO در پشت پخش کننده دی وی دی را به ترمینالهای (قرمز و سفید) VIDEO IN / (زرد) VIDEO تلویزیون خود وصل کنید.

۲

پخش کننده دی وی دی و تلویزیون خود را روشن کنید.

۳


گزینه‌شکر ورودی را بر روی کنترل از راه دور تلویزیون فشار دهید تا اینکه سیگنال ویدئو از پخش کننده دی وی دی بر روی صفحه تلویزیون نمایان شود.

تذکر

- اگر کابل صدا را زیادی در نزدیکی خط سیم برق قرار دهید ممکن است سروصدا تولید شود.
- اگر می خواهید آمپلی فایری را وصل کنید، لطفاً به صفحه اتصال آمپلی فایر مراجعه کنید. (به صفحات ۱۲ تا ۱۳ مراجعه کنید)
- شماره و محل ترمینالها ممکن است بر اساس تلویزیون شما تفاوت داشته باشد. لطفاً به دفترچه راهنمای کاربر تلویزیون خود مراجعه کنید.
- اگر یک ترمینال ورودی صوت در تلویزیون شما موجود است، آن را به ترمینال [AUDIO OUT] [چپ] (سفید) در پخش کننده دی وی دی وصل کنید.

اتصال به تلویزیون (آمیخته)

- وصل کردن به تلویزیون خود با استفاده از کابل‌های ویدیویی Component.
- شما از تصاویر دوباره تولید شده با کیفیت بالا و رنگ دقیق لذت خواهید برد. جزء ویدئو عنصر تصویر را به سیگنال‌های سیاه و سفید (Y)، آبی (PB)، قرمز (PR) تفکیک می‌کند تا تصاویر واضح و تمیز را ارائه نماید. (سیگنال‌های صوتی از طریق خروجی صوتی انتقال داده می‌شوند.)

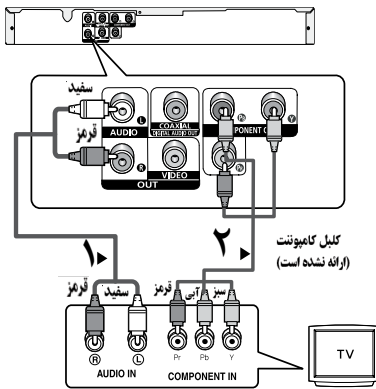

۱
با استفاده از کابل‌های ویدئو (تأمین نشده)، پایانه‌های **COMPONENT VIDEO OUT** را در پشت دستگاه پخش دی‌وی به پایانه‌های **COMPONENT IN** در تلویزیونتان متصل کنید.

۲
با استفاده از کابل‌های صوتی، ترمینال‌های **AUDIO OUT** (قرمز و سفید) در پشت پخش‌کننده دی‌وی را به ترمینال‌های **AUDIO IN** (قرمز و سفید) تلویزیون وصل کنید. پخش‌کننده دی‌وی و تلویزیون را روشن کنید.


۳
گزینه‌گر ورودی را بر روی کنترل از راه دور تلویزیون فشار دهید تا اینکه سیگنال جزء از پخش‌کننده دی‌وی در روی صفحه تلویزیون نمایان شود.

۴
در منوی **Video Output**، **Display Setup**، **Component (I-SCAN)** تنظیم کنید. (به صفحات ۲۷ تا ۲۸ مراجعه کنید)

تذکر

- اگر می‌خواهید آمپلی‌فایری را وصل کنید، لطفاً به صفحه اتصال آمپلی‌فایر مراجعه کنید. (به صفحات ۱۳ تا ۱۴ مراجعه کنید)
- ترمینال component تلویزیون می‌تواند با توجه به سازنده دستگاه، بجای "Y, PB, PR" صورت "Y, B-Y, R-Y" یا "Y, Cr, Cb, Y" علامت‌گذاری شده باشد. شماره و محل ترمینالها ممکن است بر اساس تلویزیون تفاوت داشته باشد. لطفاً به دفترچه راهنمای کاربر تلویزیون خود مراجعه کنید.

اتصال به تلویزیون (تدریجی)

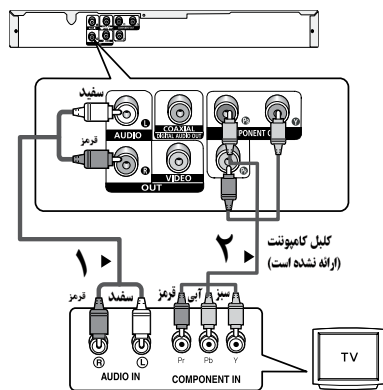

۱

با استفاده از کابل های ویدئو (تأمین نشده)، پایانه های COMPONENT VIDEO OUT را در پشت دستگاه پخش دی وی دی به پایانه های COMPONENT IN در تلویزیونتان متصل کنید.

۲

با استفاده از کابل های صوتی، ترمینال AUDIO OUT (قرمز و سفید) در پشت پخش کننده دی وی دی را به ترمینال های AUDIO IN (قرمز و سفید) تلویزیون وصل کنید. پخش کننده دی وی دی و تلویزیون را روشن کنید.

۳

گزینه گزر و ورودی را بر روی کنترل از راه دور تلویزیون فشار دهید تا اینکه سیگنال جزء از پخش کننده دی وی دی بر روی صفحه تلویزیون نمایان شود.

۴

در منوی Display Setup، Video Output را روی Component (P-SCAN) تنظیم کنید. (به صفحات ۲۶-۲۷ مراجعه کنید)

برای دیدن خروجی ویدئوی تدریجی موارد زیر را دنبال کنید،

- برای دانستن اینکه آیا تلویزیون شما از اسکن تدریجی پشتیبانی می کند به دفترچه راهنمای استفاده کننده تلویزیون خود مراجعه کنید. اگر اسکن تدریجی پشتیبانی می شود، تنظیمات اسکن تدریجی دفترچه در راهنمای کاربر تلویزیون خود را در منوی سیستم تلویزیون دنبال کنید.
- بر اساس نوع تلویزیون خود، روش اتصال ممکن است با تصویر بالا تفاوت داشته باشد.

نذکر

- "اسکن تدریجی" چیست؟ اسکن تدریجی نسبت به روش خروجی آمیخته دو برابر خطوط اسکن بیشتر دارد. روش اسکن تدریجی می تواند کیفیت تصویر بهتر و وضوحتری را ارائه نماید.

اتصال به یک سیستم صوتی (آمپلی فایر ۲ کانال)

۱

با استفاده از کابلهای صوتی، ترمینالهای **AUDIO OUT** (قرمز و سفید) در پشت پخش کننده دی وی را به ترمینالهای **AUDIO IN** (قرمز و سفید) آمپلی فایر وصل کنید.

۲

با استفاده از کابل (های) سیگنال ویدئو، پایانه های **COMPONENT OUT. VIDEO** در پشت پخش کننده دی وی را به پایانه **VIDEO**، **COMPONENT IN** در تلویزیونتان بطوریکه در صفحات ۹ تا ۱۲ توضیح داده شده وصل کنید.

۳


پخش کننده دی وی، تلویزیون و آمپلی فایر را روشن کنید.

۴


دکمه انتخاب ورودی آمپلی فایر را برای انتخاب **external input** فشار دهید تا صدای پخش کننده دی وی را بشنوید. برای تنظیم خروجی آمپلی فایر، به راهنمای کاربر آمپلی فایر خود رجوع کنید.

تذکر

- هنگام روشن کردن آمپلی فایر، لطفاً ولوم صدا را کم کنید. صدای ناگهانی ممکن است به بلندگوها و گوشهای شما صدمه برساند.
- لطفاً صدا را در صفحه منو بر اساس آمپلی فایر خود تنظیم کنید. (به صفحات ۲۸ تا ۲۹ مراجعه کنید)
- وضعیت ترمینالها بر اساس آمپلی فایر ممکن است متفاوت باشد. لطفاً به دفترچه راهنمای کاربر آمپلی فایر مراجعه کنید.

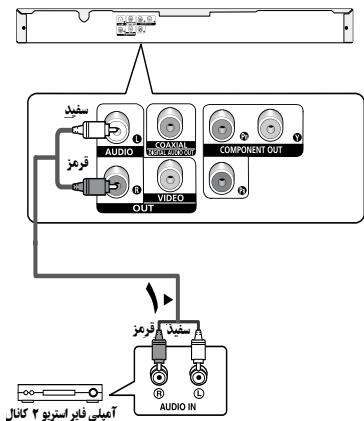

اتصال به سیستم صوتی (دالبی دیجیتال، MPEG2 یا آمپلی فایر DTS)

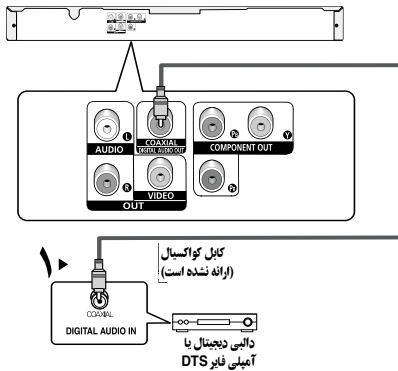

۱

(ارائه نشده است) استفاده می کنید، ترمینال **DIGITAL AUDIO OUT (COAXIAL)** در پشت پخش کننده دی وی دی را به ترمینال **DIGITAL AUDIO IN (COAXIAL)** آمپلی فایر وصل کنید.

۲

با استفاده از کابل (های) سیگنال ویدئو، پایانه های **COMPONENT OUT, VIDEO** در پشت پخش کننده دی وی دی را به پایانه **VIDEO**، **COMPONENT IN** در تلویزیونتان بطوریکه در صفحات ۹ تا ۱۲ توضیح داده شده وصل کنید.

۳

پخش کننده دی وی دی، تلویزیون و آمپلی فایر را روشن کنید.

۴

برای انتخاب **external input** دکمه انتخاب ورودی آمپلی فایر را فشار دهید تا صدای پخش کننده دی وی دی را بشنوید.
برای تنظیم خروجی آمپلی فایر، به راهنمای کاربر آمپلی فایر خود رجوع کنید.

تذکر

- هنگام روشن کردن آمپلی فایر، لطفاً ولوم صدا را کم کنید. صدای ناگهانی ممکن است به بلندگوها و گوشهای شما صدمه برساند.
- لطفاً صدا را در صفحه منو بر اساس آمپلی فایر خود تنظیم کنید. (به صفحات ۲۶-۲۷ مراجعه کنید)
- وضعیت ترمینالها بر اساس آمپلی فایر ممکن است متفاوت باشد. لطفاً به دفترچه راهنمای کاربر آمپلی فایر مراجعه کنید.

عملکردهای اصلی

پخش کردن یک دیسک

قبل از پخش

- تلویزیون خود را روشن کرده و آنرا بر روی Video Input (ورودی صحیح) بر روی کنترل از راه دور تلویزیون تنظیم کنید.
- اگر سیستم صوتی خارجی را وصل کرده اید، سیستم صوتی را روشن کنید و آن را روی ورودی صوتی صحیح تنظیم کنید.



بعد از وصل کردن پخش کننده، اولین باری که دکمه **POWER** دی وی دی را فشار می دهید، این صفحه ظاهر می شود: اگر می خواهید زبانی را انتخاب کنید، دکمه **▲/▼** را فشار دهید. (این صفحه فقط زمانی ظاهر می شود که شما برای اولین بار پخش کننده را وصل کرده باشید.) اگر زبان صفحه تنظیم تعیین نشده باشد، تنظیمات ممکن است هر بار که دستگاه را روشن یا خاموش کنید، تغییر کنند. بنابراین، مطمئن شوید که زبانی که می خواهید استفاده کنید را انتخاب کرده باشید. وقتی که انتخاب زبان منو را انتخاب کردید، می توانید آن را با فشار دادن دکمه **▶II** در پانل جلوی دستگاه بمدت بیشتر از ۵ ثانیه در حالیکه دیسکی در دستگاه نباشد، تغییر دهید. سپس پنجره **SELECT MENU LANGUAGE** دوباره ظاهر می شود که در آن می توانید زبان دلخواه خود را بازنشانی کنید.

پخش

مکث دادن پخش

دکمه **▶II** (PLAY/PAUSE) یا دکمه کنترل از راه دور

دور را در حین پخش فشار دهید.

پخش حرکت مرحله ای (بجز سی دی)

دکمه **SKIP** در کنترل از راه دور را در حین پخش فشار دهید.

صفحه متوقف می شود و صدای تولید نخواهد شد. برای از سرگیری مجدد، دکمه **▶II** (PLAY/PAUSE) را دوباره فشار دهید.

پخش حرکت مرحله ای (بجز سی دی)

دکمه **SEARCH** (◀▶) را فشار داده و نگاه دارید تا سرعت پخش از میان ۱/۸، ۱/۴، ۱/۲ سرعت معمولی رادر حین حالت PAUSE انتخاب کنید.

تذکر

- اگر پخش کننده در حالت توقف برای بیشتر از یک دقیقه بدون هر گونه تعامل کاربر رها شود، یک محافظ صفحه فعال خواهد شد.
- دکمه **▶II** (PLAY/PAUSE) را فشار دهید تا پخش عادی از سر گرفته شود.
- اگر پخش کننده برای بیش از ۳۰ دقیقه در حالت توقف گذاشته شود، بطور اتوماتیک خاموش شده بغیر از زمانیکه میکروفن متصل شده باشد (عملکرد Automatic Power-Off)
- اگر پخش کننده بیش از ۵ دقیقه در حالت مکث رها شود، متوقف خواهد شد.
- این شمایل (⓪) نشاندهنده فشار دکمه نادرست است.

دکمه **OPEN/CLOSE** (▲)

را فشار دهید.

دیسک را بصورتی که برچسب آن رو به بالا باشد به نرمی در سینی قرار دهید.

دکمه **PLAY/PAUSE** (▶II) یا دکمه **OPEN/CLOSE** (▲)

را برای بستن سینی دیسک فشار دهید.

هنگامی که پخش دیسک را متوقف می کنید، پخش کننده جایی که در آن توقف انجام داده بودید را بخاطر می سپارد، بنابراین هنگامی که دکمه **▶II** (PLAY/PAUSE) را دوباره فشار می دهید، دستگاه از محلی که متوقف شده بود شروع می کند.

متوقف نمودن پخش

دکمه **STOP** (■) را در حین پخش فشار دهید.

خارج کردن دیسک

دکمه **OPEN/CLOSE** (▲) را فشار دهید.

استفاده کردن از عملکردهای جستجو و پرش

استفاده کردن از عملکرد نمایش

در حین پخش، شما می توانید به سرعت در میان یک فصل یا تراک جستجو کنید، و از این عملکرد برای پرش به انتخاب بعدی استفاده کنید.

جستجو کردن در میان یک فصل یا تراک

در حین پخش، دکمه **(◀▶)** یا **SEARCH** را در کنترل از راه دور برای بیش از ۱ ثانیه فشار دهید.

دی وی دی	X۲، X۴، X۶۴، X۱۲۸
سی دی ویدئویی	X۸، X۴
سی دی	X۲، X۴، X۸

تذکر

- سرعت علامت گذاری شده در این عملکرد ممکن است با سرعت واقعی پخش تفاوت داشته باشد.
- هیچ صدایی در خلال حالت جستجو بگوش نخواهد رسید (بجز سی دی).

پرش کردن از تراکها

در حین پخش، دکمه **SKIP** (▶▶) یا (◀◀) را فشار دهید.

- هنگام پخش یک دی وی دی، اگر دکمه **SKIP** (▶▶) را فشار دهید، دستگاه به فصل بعد می رود. اگر دکمه **SKIP** (◀◀) را فشار دهید، دستگاه به ابتدای فصل بعد می رود. یک فشار دیگر دستگاه را به ابتدای فصل قبل می برد.

هنگام پخش VCD

یا یک سی دی، اگر دکمه **SKIP** (▶▶) را فشار دهید، دستگاه به تراک بعد می رود. اگر دکمه **SKIP** (◀◀) را فشار دهید، دستگاه به ابتدای تراک می رود. یک فشار دیگر دستگاه را به ابتدای تراک قبل می برد.

- در حین پخش سی دی ویدئویی، اگر تراک بیش از ۱۵ دقیقه باشد و شما دکمه **▶▶** را فشار دهید، دستگاه به مقدار ۵ دقیقه به جلو می رود. اگر دکمه **◀◀** را فشار دهید، دستگاه ۵ دقیقه به عقب می رود.

تذکر

هنگام مک VCD Menu Disc ممکن ست کار نکند.

هنگام پخش یک DVD/VCD/MPEG4

۱

در حین پخش، دکمه **INFO** در کنترل از راه دور را فشار دهید.

می توانید Info در منو عملکرد را با فشار دادن دکمه **MENU** انتخاب کنید.

۲

جهت انتخاب مورد دلخواه، دکمه های **▲/▼** را فشار دهید.

– هنگام مک VCD Menu Disc ممکن ست کار نکند.

۳

دکمه های **▶/◀** را فشار دهید تا تنظیم دلخواه را ایجاد کنید و سپس دکمه **ENTER** را فشار دهید.

۴

برای محو کردن صفحه.

دکمه **CANCEL** را مجدداً فشار دهید.

تذکر

برای دسترسی به عنوان دلخواه در زمانی که بیش از یک عنوان در دیسک موجود باشد، برای مثال، اگر بیشتر از یک فیلم در دی وی دی موجود باشد، هر فیلم شناسایی خواهد

بیشتر دیسکهای دی وی دی بصورت فصل ضبط شده اند تا بتوانید به سرعت قسمت مربوطه را پیدا کنید (مشابه تراکها در سی دی صوتی)

اجازه پخش فیلم از زمان دلخواه را می دهد. شما باید زمان شروع به عنوان مرجع وارد کنید. عملکرد جستجوی وقت در بعضی دیسکها کار نمی کند.

به زبان شیار صوتی فیلم رجوع شود. در این مثال، صدای تراک صوت به زبان انگلیسی بصورت ۵/۱ کانال ضبط می شود.

یک دیسک دی وی دی می تواند تا هشت تراک صوتی مختلف داشته باشد. از AC3، MP3 و WMA پشتیبانی می شود. (DivX)

به زبانهای زیر نویس موجود در دیسک اضافه می کند. شما قادر خواهید بود که زبانهای زیر نویس را انتخاب کنید یا، اگر ترجیح می دهید، آنها را از روی صفحه خاموش کنید. یک دیسک دی وی دی می تواند تا ۳۲ زبان زیر نویس مختلف داشته باشد.

جهت دسترسی به قابلیت **Bookmark** یا **Angle** دلخواه قابلیت های زاویه پیش بینی شده در برخی از دیسک های DVD از هر تصویر ممکن بیشتر است.

قابلیت **Bookmark** به شما امکان می دهد تا هر تراک یا فصل را به آسانی و سرعت در DVD یا VCD پیدا کنید.

عملکردهای اصلی

پخش تکراری

تراک، فصل، عنوان، فعلی، یک قسمت انتخاب شده (A-B)، یا تمام دیسک را تکرار کنید.

هنگام پخش دی وی دی / سی دی ویدئویی

DVD/ VCD



دکمه **REPEAT** در کنترل از راه دور را فشار دهید.

دکمه های **REPEAT** را برای انتخاب **Title .Chapter** یا

دی وی دی پخش را با تکرار فصل یا عنوان انجام می دهد، سی دی و سی دی ویدئویی پخش را با تکرار دیسک یا تراک انجام می دهند.
Chapter : فصلی که در حال پخش است را تکرار می کند.

Title : عنوانی که در حال پخش است را تکرار می کند.

Disc : دیسکی که در حال پخش است را تکرار می کند.


Track : تراکی که در حال پخش است را تکرار می کند.

استفاده کردن از عملکرد A-B Repeat

۱. دکمه **REPEAT A-B** را در محلی که می خواهید پخش تکراری (A) آغاز شود را فشار دهید.

۲. دکمه **REPEAT A-B** را در نقطه ای که می خواهید پخش تکراری (B) متوقف شود، فشار دهید.

- برای بازگشت به تماشای عادی، دکمه **CANCEL** را دوباره فشار دهید.

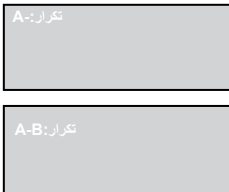

استفاده کردن از منوی دیسک و عنوان

استفاده کردن از Disc Menu

در حین پخش یک دیسک دی وی دی، دکمه **MENU** در کنترل از راه دور را فشار دهید.




دکمه های **▲/▼** را برای انتخاب **Disc Menu** فشار داده، سپس دکمه **▶** یا **ENTER** را فشار دهید.

تذکر

- با توجه به دیسک، Disc Menu ممکن است کار نکند.
- شما همچنین می توانید از Disc Menu با استفاده از دکمه **DISC MENU** در کنترل از راه دور استفاده کنید.
- هنگامی که Disc Menu، VCD ممکن است کار نکند.

استفاده کردن از Title Menu (DVD)

در حین پخش یک دیسک دی وی دی، دکمه **MENU** در کنترل از راه دور را فشار دهید.

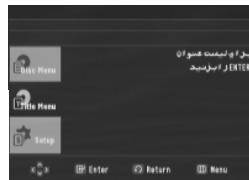

دکمه های **▲/▼** را برای انتخاب **Title Menu** فشار داده، سپس دکمه **▶** یا **ENTER** را فشار دهید.

تذکر

- با توجه به دیسک، Title Menu ممکن است کار نکند.
- Title Menu فقط در زمانی نمایش داده خواهد شد که حداقل دو عنوان در دیسک وجود داشته باشد.

عملکردهای پیشرفته

تنظیم کردن درجه بزرگنمایی (نمای EZ)

برای پخش با استفاده از درجه بزرگنمایی (دی وی دی)

۱ در حین پخش، دکمه INFO
بر روی کنترل از راه دور
را فشار دهید.

۲ دکمه های ▲/▼ را برای
انتخاب Shortcut فشار
داده، سپس دکمه ► یا
ENTER را فشار دهید.

۳ دکمه های ◀/▶ را برای
انتخاب EZ VIEW فشار
داده، سپس دکمه ► یا
ENTER را فشار دهید.

۴ به های ◀/▶ را برای
خاب زبان دلخواه فشار



پخش آهسته

این ویژگی به شما اجازه می دهد تا صحنه های ورزشی،
رقص، سازهای موسیقی پخش شده و غیره را
بطور آهسته تکرار کنید، تا بتوانید آنان را از نزدیک
بررسی کنید.

هنگام پخش دی وی دی

۱

در حین پخش، دکمه
PLAY/PAUSE (▶||) را فشار
دهید.

۲

دکمه (▶▶) SEARCH را
فشار داده و نگاه دارید تا
سرعت پخش از میان ۱/۲،
۱/۴ و ۱/۸ سرعت معمولی
را در حین حالت PAUSE یا انتخاب کنید.

اگر شما از تلویزیون ۱۶:۹ استفاده می کنید

برای دیسکهای دارای درجه بزرگنمایی ۱۶:۹

- صفحه عرض
محتویات عنوان دی وی دی را با درجه بزرگنمایی ۱۶:۹
پخش می کند.

- اندازه صفحه
بخشهای بالا و پائین صفحه بریده می شوند. هنگام
پخش دیسک دارای درجه بزرگنمایی ۱:۲/۳، نوارهای
سیاه در بالا و پائین صفحه محو خواهند شد. تصویر
بصورت کشیده شده بطور عمودی بنظر خواهد آمد.
(بر اساس نوع دیسک، نوارهای مشکی ممکن است بطور
کاملاً محو نشوند.)

- اندازه زوم
بالا، پائین، سمت راست و چپ صفحه بریده می شوند و
قسمت مرکزی صفحه بزرگ می شود.

برای دیسکهای دارای درجه بزرگنمایی ۴:۳

- عرض عادی
محتویات عنوان دی وی دی را با درجه بزرگنمایی ۱۶:۹
پخش می کند. تصویر بصورت کشیده شده بطور افقی
بنظر خواهد آمد.

- اندازه صفحه
بخشهای بالا و پائین صفحه بریده می شوند و صفحه
کامل ظاهر خواهد شد.
تصویر بصورت کشیده شده بطور عمودی بنظر خواهد
آمد.

- اندازه زوم
قسمتهای بالا، پائین، سمت راست و چپ صفحه بریده
می شوند و قسمت مرکزی صفحه بزرگ می شود.

- اندازه عمودی
هنگامی که دی وی دی ۴:۳ در تلویزیون ۱۶:۹ مشاهده
شود، نوارهای مشکی در سمت راست و چپ صفحه
ظاهر می شوند تا از کشیده شدن تصویر بصورت افقی
جلوگیری بعمل آید.

عملکردهای پشرفته

۲

اگر از تلویزیون ۴:۳ استفاده می کنید

برای پاک کردن شمایلی.
Audio ، دکمه Cancel یا
RETURN را فشار دهید.

برای دیسکهای دارای درجه بزرگنمایی ۱۶:۹

- صندوق پست ۴:۳

محتویات عنوان دی وی دی را با درجه بزرگنمایی ۱۶:۹
پخش می کند.
نوارهای مشکی در بالا و پایین صفحه ظاهر می شوند.

- پن-اسکن ۴:۳

قسمتهای راست و چپ صفحه بریده می شوند و قسمت
مرکزی صفحه ۱۶:۹ نمایش داده می شود.

- اندازه صفحه

بخشهای بالا و پایین صفحه بریده می شوند و صفحه
کامل ظاهر خواهد شد.
تصویر بصورت کشیده شده بطور عمودی بنظر خواهد
آمد.

- اندازه زوم

بالا، پایین، سمت راست و چپ صفحه بریده می شوند و
قسمت مرکزی صفحه بزرگ می شود.

برای دیسکهای دارای درجه بزرگنمایی ۴:۳

- صفحه عادی

محتویات عنوان دی وی دی را با درجه بزرگنمایی ۴:۳
پخش می کند.

- اندازه صفحه

بخشهای بالا و پایین صفحه بریده می شوند و صفحه
کامل ظاهر خواهد شد.
تصویر بصورت کشیده شده بطور عمودی بنظر خواهد
آمد.

- اندازه زوم

قسمتهای بالا، پایین، سمت راست و چپ صفحه بریده
می شوند و قسمت مرکزی صفحه بزرگ می شود.

تذکر

این عملکرد ممکن است بر اساس نوع دیسک بطور متفاوت عمل کند.

انتخاب کردن زبان صدا

می توانید یک زبان صدای دلخواه را بسرعت و
بسادگی با استفاده از دکمه AUDIO انتخاب کنید.

استفاده کردن از دکمه AUDIO (DVD/VCD/MPEG4)

DVD



دکمه AUDIO را فشار دهید.
Audio هنگامی که دکمه
بطور مکرر فشار داده شود،
تغییر می کند.

VCD



- زبان صوتی با حرف
اختصاری نشان داده شده
است.

MPEG4



هنگام پخش سی دی
ویدیویی یا سی دی، شما می
توانید از میان استریو، راست یا
چپ یکی را انتخاب کنید.

انتخاب کردن زبان زیر نویس

شما می توانید بسرعت و بسادگی زبان زیر نویس دلخواه
را با استفاده از دکمه SUBTITLE انتخاب کنید.


استفاده از دکمه (DVD/MPEG4) SUBTITLE

DVD



دکمه SUBTITLE را فشار
دهید.

MPEG4

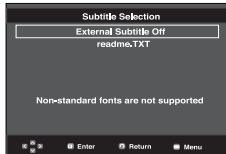

دکمه های < و > را برای
انتخاب زبان دلخواه فشار

MPEG4



برای پاک کردن شمایلی
دکمه Cancel یا
RETURN را فشار دهید.

تذکر

- بستگی به نوع دی وی دی، بایستی که زیرنویس
مورد نظر را در Disc Menu (منوی دیسک) تغییر
دهید. دکمه DISC MENU را فشار دهید.
- این عملکرد به زیرنویس که روی دیسک
رمگذاری شده اند بستگی دارد و ممکن است در
تمامی دی وی دی ها کار نکند.
- یک دیسک دی وی دی می تواند حداکثر دارای ۳۲
زبان زیرنویس باشد.
- برای فعال کردن زبان زیر نویس مشابه در هر بار
که دی وی دی پخش می شود: به "استفاده از زبان
زیر نویس" در صفحه ۲۶ مراجعه کنید.

تغییر دادن زاویه دوربین

هنگامی که وی دی حاوی زوایای دید مختلف از یک صحنه خاص است، می توانید از عملکرد ANGLE استفاده کنید.

استفاده از دکمه ANGLE (DVD)

اگر دیسک حاوی زوایای مختلفی باشد، ANGLE روی صفحه ظاهر می شود.

۱

در حین پخش، دکمه INFO بر روی کنترل از راه دور را فشار دهید.

۲

دکمه های ▲/▼ را برای انتخاب Shortcut فشار

۳

دکمه های ►/◀ را برای انتخاب ANGLE فشار داده، سپس دکمه ENTER را فشار دهید.

تذکر

اگر دیسک فقط دارای یک زاویه باشد، این ویژگی کار نخواهد کرد.

در حال حاضر، تعدادی کمی از دیسکها دارای این ویژگی می باشند.

استفاده کردن از عملکرد نشانه گذاری

این ویژگی به شما اجازه می دهد تا بخشی از یک وی

وی دی یا سی دی ویدئوی دانشانه

گذاری کنید تا بتوانید سرعت آنها را در آینده پیدا کنید.

استفاده از عملکرد Bookmark (DVD/VCD)

۱

در حین پخش، دکمه INFO را در کنترل از راه دور فشار دهید.

۲

دکمه های ▲/▼ را برای انتخاب Shortcut فشار داده، سپس دکمه ENTER را فشار دهید.

۳

دکمه های ►/◀ را برای انتخاب Bookmark فشار داده، سپس دکمه ► یا ENTER را فشار دهید.

۴

هنگامی که به صحنه هایی که می خواهید علامتگذاری شوند رسیدید، دکمه ENTER را فشار دهید. تا سه صحنه را می توان در هر بار علامت گذاری نمود.

تذکر

– هنگامی که Disc Menu VCD ممکن است کار نکند.

– با توجه به عملکرد Bookmark ممکن است کار نکند.

۱~۳

سه مرحله ۱ تا ۳ مشابه مراحل "استفاده کردن از عملکرد Bookmark" در صفحه ۲۰ می باشند.

۴

دکمه های ►/◀ را برای انتخاب یک صحنه علامت گذاری شده فشار دهید.

۵

دکمه (PAUSE/PLAY) برای پرش از صحنه علامت گذاری شده فشار دهید.

پاک کردن یک Bookmark

۱~۳

سه مرحله نخست ۱ تا ۳ مشابه مراحل "استفاده کردن از عملکرد Bookmark" در صفحه ۲۰ می باشند.

۴

دکمه های ►/◀ را برای انتخاب شماره نشانه گذاری که می خواهید حذف شود، فشار دهید.

۵

دکمه CANCEL را برای حذف یک شماره علامت گذاری فشار دهید.



عملکرد های پیشرفته

استفاده کردن از عملکرد بزرگنمایی

استفاده از عملکرد بزرگنمایی (DVD/VCD)

۱

در حین پخش دکمه Zoom

دادر کنترل از راه دور

فشار دهید ENTER

۲

دکمه های ▲/▼ را برای انتخاب بخشی از صفحه که می خواهید بزرگ یا کوچک شود، فشار دهید. دکمه ENTER را فشار دهید.

در خلال پخش دی وی دی، دکمه ENTER را برای بزرگنمایی به ترتیب X2/X4/X8/معمولی فشار دهید.



انتخاب کردن پوشه

پوشه را فقط می توان در حالت Stop انتخاب کرد.

- برای گزینش پوشه اصلی


برای انتخابی پوشه مادر، دکمه RETURN را برای رفتن به پوشه مادر فشار دهید، یا دکمه های ▲/▼ را برای انتخاب "فشار دهید و دکمه ENTER را برای رفتن به پوشه مادر فشار دهید.

- برای انتخاب پوشه همگانی

دهید. جهت انتخاب مورد دلخواه، دکمه های ▲/▼ را فشار دهید، سپس ENTER را فشار دهید.

- برای انتخاب پوشه فرعی

دهید. دکمه های ▲/▼ را برای انتخاب پوشه دلخواه فشار دهید، سپس ENTER را فشار دهید.

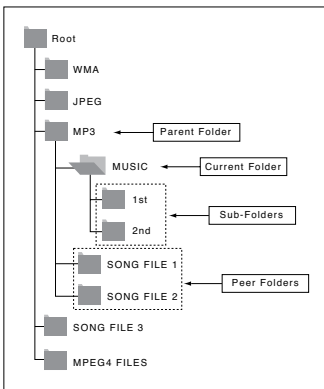

منوی قطعات MP3/WMA/JPEG/MPEG4

دیسکهای MP3/WMA/JPEG/MPEG4 حاوی آهنگهای تکی و/یا تصویری هستند که می توان آنان را در پوشه ها به ترتیب زیر مرتب نمود. این موارد مشابه روشی است که در رایانه برای قرار دادن فایلها در پوشه های مختلف از آن استفاده می کنید.



سینی دیسک را باز کنید. دیسک را روی سینی قرار دهید.

سینی را ببندید. سینی بسته می شود و این صفحه نمایش داده می شود.

پخش MP3/WMA

۱

سینی دیسک را باز کنید.
دیسک را روی سینی قرار دهید.
سینی را ببندید.

۲

دکمه های ▲/▼

را برای انتخاب یک فایل
آهنگ فشار دهید.

برای آغاز پخش فایل آهنگ
ENTER را فشار دهید.

پخش تکراری / تصادفی

دکمه REPEAT را برای
تغییر حالت پخش فشار
دهید.

چهار حالت وجود دارد: Off,
Random, folder, track, disc

Off : پخش عادی

Track : فایل آهنگ فعلی را تکرار می کند.

Folder : فایلهای آهنگی که دارای پسوند مشابه در پوشه
فعلی باشند را تکرار می کند.

Random : فایلهای آهنگی که دارای پسوند مشابه باشند
به ترتیب تصادفی پخش خواهند شد.

Disc: دیسکی که در حال پخش است را

برای بازگشت به پخش عادی، دکمه CLEAR را فشار دهید.



- از یک نرخ انتقال باز کردن فشرده‌گی حداقل برابر با ۱۲۸ کیلو بیت در ثانیه
در زمان ضبط فایل‌های MP3 استفاده کنید.

کیفیت صدا در فایل‌های MP3 اساساً به نرخ فشرده
سازی/باز کردن فشرده‌گی که انتخاب می کنید بستگی
دارد. بدست آوردن صدایی با کیفیت سی دی به نرخ
نمونه گیری آنالوگ/دیجیتال نیاز دارد. یعنی تبدیل به
فرمت MP3 به حداقل نرخ نمونه گیری ۱۲۸ کیلو بیت
در ثانیه و حداکثر ۱۶۰ کیلو بیت در ثانیه نیاز دارد.
اما، انتخاب کردن نرخهای بالاتر، مانند ۱۹۲ کیلو بیت
در ثانیه یا بیشتر، بندرت کیفیت صدای بهتری را
ایجاد می کند.

بر عکس این حالت، فایل‌های که دارای نرخهای باز کردن
فشرده‌گی پایینتر از ۱۲۸ کیلو بیت در ثانیه باشند
بطور صحیح پخش نخواهند شد.

- هنگام ضبط کردن فایل‌های WMA از نرخ انتقال باز کردن فشرده‌گی حداقل
برابر با ۶۴ کیلو بیت در ثانیه استفاده کنید.

کیفیت صدای فایل‌های WMA اساساً بستگی به نرخ
فشرده سازی/باز کردن فشرده‌گی که انتخاب می کنید
بستگی دارد.

بدست آوردن کیفیت صدای سی دی به نرخ نمونه گیری
آنالوگ/دیجیتال بستگی دارد. یعنی تبدیل به فرمت
WMA به حداقل نرخ نمونه گیری ۶۴ کیلو بیت در ثانیه
و حداکثر ۱۹۲ کیلو بیت در ثانیه نیاز دارد.
بر عکس این حالت، فایل‌های که دارای نرخهای باز کردن
فشرده‌گی پایینتر از ۶۴ کیلو بیت در ثانیه یا بالاتر از
۱۹۲ کیلو بیت در ثانیه باشند بطور صحیح پخش
نخواهند شد.

- سعی کنید فایل‌های حفاظت شده در برابر برداری MP3 را ضبط نکنید.

برخی از فایل‌های "حفاظت شده" برای جلوگیری از
نسخه برداری غیر قانونی رمزگذاری و حفاظت کد شده
اند. این فایل‌ها از انواع زیر می باشند: Windows
MediaTM (علامت ثبت شده تجاری شرکت Microsoft) و
SDMITM (علامت ثبت شده تجاری بنیاد SDMI) نمی
توانید اینگونه فایل‌ها را نسخه برداری کنید.

- مهم:

توصیه های بالا را نمی توان به عنوان تضمینی در
مورد اینکه این پخش کننده دی وی دی فایل‌های MP3 را
پخش خواهد کرد تلقی نمود یا آنها را بعنوان تضمینی
برای کیفیت صدا در نظر گرفت. باید توجه داشته
باشید که برخی از فن آوریها و روشهای ضبط فایل
MP3 روی CD-R ها از پخش بهینه این فایل‌ها در پخش
کننده دی وی دی شما جلوگیری می کند (افت کیفیت
صدا در برخی موارد، عدم توانایی پخش کننده در
خواندن این فایل‌ها).
- این دستگاه می تواند تا ۵۰۰ فایل و ۵۰ پوشه در
هر دیسک را پخش کند.

فایل CD-R MP3/WMA

هنگامی که فایل‌های MP3 یا WMA را در CD-R ضبط می کنید، لطفاً موارد
زیر را در نظر داشته باشید.

- فایل‌های MP3 یا WMA باید به فرمت ISO 9660 یا JOLIET باشند.
فرمت ISO 9660 و فایل‌های Joliet MP3 WMA یا
Microsoft DOS یا Windows سازگار می
باشند. این فرمت معمولترین فرمت استفاده شده می
باشد.

- هنگام نامگذاری فایل‌های MP3 یا WMA، از بیشتر از ۸ حرف استفاده
نکنید، و پسوند فایل را بصورت "mp3, wma" وارد کنید.

فرمت نام عمومی: "mp3" عنوان یا "wma" عنوان.
هنگام ساخت عنوان خود، مطمئن شوید که از ۸ حرف
یا کمتر استفاده می کنید، فاصله خالی در نام وجود
ندارد، و از بکارگیری حروف ویژه زیر خودداری کنید:
(.,/ \, =, +)


عملگردهای پشرفته

پخش MPEG4

پخش سی دی عکس

۱ پوشه دلخواه را انتخاب کنید.

۲ دکمه های ▲/▼ را برای انتخاب فایل عکس در منو: قطعات فشار داده، سپس دکمه ENTER را فشار دهید.

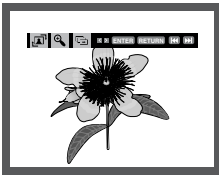

۳ دکمه INFO ابرای نمایش منو فشار دهید. دکمه ▲/▼ را برای انتخاب منویی که می خواهید تماشا کنید فشار داده، سپس دکمه ENTER را فشار دهید.

تذکر

- اگر دکمه ای برای ۱۰ ثانیه روی کنترل از راه دور فشار داده نشود، منو محو خواهد شد.
- برای بازگشت به منوی قطعات دکمه STOP را فشار دهید.

چرخش

۱ : هر بار که دکمه ENTER فشار داده شود، عکس ۹۰ درجه موافق حرکت عقربه های ساعت می چرخد.

بزرگنمایی

۱ : ▲/▼ را برای انتخاب بخش از صحنه که می خواهید بزرگ یا کوچک شود، فشار دهید. دکمه ENTER را فشار دهید. هر بار که دکمه ENTER فشار داده شود، تصویر تا حداکثر (۲x)

نمایش اسلاید

- دستگاه وارد حالت نمایش اسلاید می شود.
- تصاویر با فواصل ۶ ثانیه ای بطور اتوماتیک تعویض می شوند.
- تصاویر با فواصل ۱۲ ثانیه ای بطور اتوماتیک تعویض می شوند.
- تصاویر با فواصل ۱۸ ثانیه ای بطور اتوماتیک تعویض می شوند.

عملکرد پخش MPEG4

فایلهای AVI برای نگه داری داده های صوتی و تصویری بکار می روند. تنها می تواند فایلهای فرمت AVI که پسوند "avi" دارند را پخش کرد.



۱ سینی دیسک را باز کنید. دیسک را بر روی سینی بگذارید. سینی را ببندید.

۲ جهت انتخاب یک فایل avi (DivX/XviD)، دکمه های ▲/▼ را فشار داده، سپس دکمه ENTER را فشار دهید.

تکرار پخش

برای تغییر حالت پخش، دکمه REPEAT را فشار دهید. حالت وجود دارد، از قبیل خاموش (Off)، پوشه (Folder)، عنوان (Track) (یک فاصله بین دو نقطه مشخص شده توسط کاربر).


- پوشه (Folder): فایلهای AVI را تکرار می کند که در پوشه فعلی پسوند دارند.
- عنوان (Track): عنوانی که پخش می شود را تکرار می کند.

توصیف عملکرد MPEG4

صفحه مراجعه	توصیف	عملکرد
-	در حین پخش، دکمه ► یا ◀ را فشار دهید، به مدت ۵ دقیقه به عقب یا جلو حرکت می کند.	رد شدن (◀ یا ►)
-	در حین پخش، دکمه SEARCH (◀ یا ►) را فشار داده و برای جستجو با سرعت بیشتر دوباره فشار دهید. به شما امکان می دهد تا با سرعت بیشتری در فایل AVI جستجو کنید. (X۸، X۴، X۲)	جستجو (◀ یا ►)
صفحه ۱۴	به شما امکان می دهد تا با سرعت کمتری در فایل AVI جستجو کنید. (۱/۲، ۱/۴، ۱/۸)	پخش حرکت آهسته

ممکن است بستگی به فایل MPEG4، این عملگردها کار نکنند.

دیسکهای CD-R JPEG

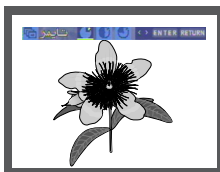

تذکر

- بستگی به اندازه فایل، مقدار زمانی بین هر تصویر ممکن است با فاصله زمانی تنظیم شده متفاوت باشد.
- اگر دکمه ای را فشار ندهید، نمایش اسلاید بصورت پیش فرض بعد از حدود ۱۰ ثانیه بطور اتوماتیک شروع می شود.

- فقط فایل‌های دارای پسوند ".jpg" و ".JPG" می توانند پخش گردند.
- اگر دیسک بسته نشده باشد، آغاز پخش بیشتر طول خواهد کشید و ممکن است تمامی فایل‌های ضبط شده پخش نشوند.
- فقط دیسکهای CD-R دارای فایل‌های JPEG در فرمت ISO 9660 یا Joliet می توانند پخش گردند.
- نام فایل JPEG نمی تواند بیش از ۸ حرف باشد و نباید حاوی فاصله خالی یا حروف ویژه باشد (+ = / .).
- فقط یک دیسک چند جلسه ای ترتیبی می تواند پخش گردد.
- اگر بخش خالی در یک دیسک چند جلسه ای وجود داشته باشد، دیسک را فقط تا بخش خالی می توان پخش کرد.
- حداکثر تا ۲۰۰۰ تصویر را می توان در یک دیسک تک ضبط نمود.
- سی دی های عکس کدک توصیه می شوند.
- هنگام پخش سی دی تصویر کدک، فقط فایل‌های JPEG در پوشه عکسها را می توان پخش کرد.
- سی دی عکس کدک: فایل‌های JPEG در پوشه عکسها می توانند بطور اتوماتیک پخش شوند.
- سی دی عکس کونیکا: اگر می خواهید عکس را مشاهده کنید، فایل‌های JPEG در منوی قطعات را انتخاب کنید.
- سی دی عکس فوجی: اگر می خواهید عکس را مشاهده کنید، فایل‌های JPEG در منوی قطعات را انتخاب کنید.
- سی دی عکس QSS: دستگاه نمی تواند دیسک عکس QSS را پخش کند.
- اگر تعداد فایل‌ها در دیسک ۱ بیش از ۵۰۰ باشد، فقط فایل‌های JPEG می توانند پخش شوند.
- اگر تعداد پوشه های دیسک ۱ بیشتر از ۵۰۰ باشد، فقط پوشه های فایل‌های JPEG می توانند پخش شوند.

تغییر دادن منوی تنظیم

استفاده از منوی تنظیم

منوی Setup به شما اجازه می دهد تا پخش کننده دی وی خود را با انتخاب ترجیحات مختلف زبان، تنظیم سطح والدین، حتی تنظیم پخش کننده با نوع صفحه تلویزیونی که دارید، سفارشی نمایید.

تنظیم کردن ویژگیهای زبان

اگر منوی پخش کننده، منوی دیسک، صدا و زبان زیر نویس را از قبل تنظیم کرده اید، آنها هر بار که شما

استفاده کردن از زبان Player Menu

در زمانی که دستگاه در حالت توقف است، دکمه **Menu** را فشار دهید.

دکمه های **▲/▼** را برای انتخاب **Setup** فشار داده، سپس دکمه **▶** یا **ENTER** را فشار دهید.

دکمه های **▲/▼** را برای انتخاب "تنظیم زبان (Language Setup)" فشار داده، سپس دکمه **▶** یا **ENTER** را فشار دهید.

دکمه های **▲/▼** را برای انتخاب "منوی پخش (Player Menu)" فشار داده، سپس دکمه **▶** یا **ENTER** را فشار دهید.

دکمه های **▲/▼** را برای انتخاب زبان دلخواه فشار دهید، سپس دکمه **▶** یا **ENTER** را فشار دهید.

- زبان انتخاب می شود و صفحه به منوی "تنظیم زبان (Language Setup)" باز می گردد.

- برای محو کردن منوی تنظیم، دکمه **MENU** را فشار دهید.

هنگامی که دستگاه در حالت توقف قرار دارد، دکمه **MENU** را در کنترل از راه دور فشار دهید. دکمه های **▲/▼** را برای انتخاب **Setup** فشار داده، سپس دکمه **▶** یا **ENTER** را فشار دهید.



۱ تنظیم زبان (Language Setup) : زبان را تنظیم می کند.

۲ تنظیم صدا (Audio Setup) : گزینه های صدا را تنظیم می کند.

۳ تنظیم نمایش : گزینه های نمایش را تنظیم می کند. برای انتخاب نوع صفحه ای که می خواهید

(Display Setup) مشاهده کنید و گزینه های متعدد نمایش از این حالت استفاده کنید.

۴ تنظیم والدین : تنظیم سطح والدین. به کاربران اجازه می دهد تا سطح مورد نیاز را برای جلوگیری (Parental Setup) کودکان از مشاهده فیلمهای نامناسب مانند فیلمهای دارای خشونت، موضوعات مربوط به بزرگسالان و غیره، تنظیم نمایند.

۵ ثبت DivX(R) : لطفاً از کد ثبت برای ثبت این دستگاه ه پخش با فرمت DivX(R) Video On Demand استفاده شود. برای اطلاعات بیشتر به www.divx.com/vod بروید.

دکمه های **▲/▼** را برای دسترسی به ویژگیهای مختلف فشار دهید. دکمه **▶** یا دکمه **ENTER** را برای دسترسی به ویژگیهای فرعی فشار دهید.

برای محو کردن صفحه تنظیم بعد از تنظیم کردن، دکمه **MENU** را دوباره فشار دهید.

تذکر

با توجه به نوع دیسک، برخی از گزینه های Setup Menu ممکن است عمل نکنند.

استفاده کردن از منوی زبان دیسک

این عملکرد فقط زبان متن را در صفحات disc menu تغییر می دهد.

در زمانی که دستگاه در حالت توقف است، دکمه **Menu** را فشار دهید.

دکمه های **▲/▼** را برای انتخاب **Setup** فشار داده، سپس دکمه **▶** یا **ENTER** را فشار دهید.

دکمه های **▲/▼** را برای انتخاب **"تنظیم زبان" (Language Setup)** فشار داده، سپس دکمه **▶** یا **ENTER** را فشار دهید.

دکمه های **▲/▼** را برای انتخاب **"منوی دیسک" (Disc Menu)** فشار داده، سپس دکمه **▶** یا **ENTER** را فشار دهید.

دکمه های **▲/▼** را برای انتخاب زبان دلخواه فشار دهید، سپس **▶** یا **ENTER** را فشار دهید.

- اگر زبان انتخاب شده روی دیسک ضبط نشده است، زبان از قبل ضبط شده اصلی انتخاب می شود.
- زبان انتخاب می شود و صفحه به منوی **"تنظیم زبان" (Language Setup)** باز می گردد.
- برای محو کردن منوی تنظیم، دکمه **MENU** را فشار دهید.

انتخاب کردن زبان صدا

در زمانی که دستگاه در حالت توقف است، دکمه **Menu** را فشار دهید.

دکمه های **▲/▼** را برای انتخاب **Setup** فشار داده، سپس دکمه **▶** یا **ENTER** را فشار دهید.

دکمه های **▲/▼** را برای انتخاب **"تنظیم زبان" (Language Setup)** فشار داده، سپس دکمه **▶** یا **ENTER** را فشار دهید.

دکمه های **▲/▼** را برای انتخاب **"صدا" (Audio)** فشار داده، سپس دکمه **▶** یا **ENTER** را فشار دهید.

دکمه های **▲/▼** را برای انتخاب زبان دلخواه فشار دهید، سپس **▶** یا **ENTER** را فشار دهید.

- اگر می خواهید زبان تراک صوتی پیش فرض با زبان اصلی ضبط شده در دیسک یکی باشد، **"اصلی" (Original)** را انتخاب کنید.
- اگر زبانی که می خواهید لیست نشده است، **"بقیه" (Others)** را انتخاب کنید.
- اگر زبان انتخاب شده روی دیسک ضبط نشده است، زبان از قبل ضبط شده اصلی انتخاب می شود.
- زبان انتخاب می شود و صفحه به منوی **"تنظیم زبان" (Language Setup)** باز می گردد.
- برای محو کردن منوی تنظیم، دکمه **MENU** را فشار دهید.

استفاده کردن از زبان زیر نویس

در زمانی که دستگاه در حالت توقف است، دکمه **Menu** را فشار دهید.

دکمه های **▲/▼** را برای انتخاب **Setup** فشار داده، سپس دکمه **▶** یا **ENTER** را فشار دهید.

دکمه های **▲/▼** را برای انتخاب **"تنظیم زبان" (Language Setup)** فشار داده، سپس دکمه **▶** یا **ENTER** را فشار دهید.

دکمه های **▲/▼** را برای انتخاب **"زیر نویس" (Subtitle)** فشار داده، سپس دکمه **▶** یا **ENTER** را فشار دهید.



تغییر دادن منوی تنظیم

تنظیم کردن گزینه های صدا

گزینه های صدا به شما اجازه می دهد تا دستگاه صوتی و تنظیمات وضعیت صدا را با توجه به سیستم صوتی مورد استفاده، تنظیم کنید.



در زمانی که دستگاه در حالت توقف است، دکمه **Menu** را فشار دهید.



دکمه های **▲/▼** را برای انتخاب **Setup** فشار داده، سپس دکمه **▶** یا **ENTER** را فشار دهید.

دکمه های **▲/▼** را برای انتخاب "تنظیم صدا" (Audio Setup) فشار داده، سپس دکمه **▶** یا **ENTER** را فشار دهید.

دکمه های **▲/▼** را برای انتخاب زبان دلخواه فشار دهید، سپس دکمه **▶** یا **ENTER** را فشار دهید.

1 Dolby Digital Out

– PCM : صدا را به PCM (2CH) تبدیل می کند.
– Bitstream : دالبی دیجیتال را از طریق خروجی دیجیتال خارج می کند. Bitstream را هنگام وصل شدن به یک رمزگشای دالبی دیجیتال استفاده کنید.

2 MPEG-2 Digital Out

– PCM : صدا را به PCM (2CH) تبدیل می کند.
– Bitstream : صدا را به جریان بیتی MPEG-2 (۵/۸ کانال یا ۸ کانال). تبدیل می کند Bitstream را هنگام استفاده از خروجی صدای دیجیتال انتخاب کنید.

3 Dynamic Compression (فشرده سازی پویا)

– On : برای انتخاب فشرده سازی دینامیک.
– Off : برای انتخاب محدوده استاندارد.

۵

دکمه های **▲/▼** را برای انتخاب زبان دلخواه فشار دهید، سپس دکمه **▶** یا **ENTER** را فشار دهید.

– اگر می خواهید زبان زیر نویس با زبان انتخاب شده به عنوان زبان صدا مشابه باشد، خودکار (Automatic) را انتخاب کنید.
– اگر زبانی که می خواهید لیست نشده است، "بقیه" (Others) را انتخاب کنید. برخی از دیسکها ممکن است حاوی زبانی که شما به عنوان زبان اولیه انتخاب می کنید نباشند؛ در این صورت دیسک از تنظیمات اصلی زبان خود استفاده خواهد کرد.

زبان انتخاب می شود و صفحه به منوی تنظیم باز می گردد.
– برای محو کردن منوی تنظیم، دکمه **MENU** فشار دهید.

استفاده کردن از زبان زیر نویس Div X

در زمانی که دستگاه در حالت توقف است، دکمه **Menu** را فشار دهید.

دکمه های **▲/▼** را برای انتخاب **Setup** فشار داده، سپس دکمه **▶** یا **ENTER** را فشار دهید.



دکمه های **▲/▼** را برای انتخاب "تنظیم زبان" (Language Setup) فشار داده، سپس دکمه **▶** یا **ENTER** را فشار دهید.

دکمه های **▲/▼** را برای انتخاب "زیر نویس DivX (DivX Subtitle)" فشار داده، سپس دکمه **▶** یا **ENTER** را فشار دهید.

۵

دکمه های **▲/▼** را برای انتخاب زبان دلخواه فشار دهید، سپس دکمه **▶** یا **ENTER** را فشار دهید.

– زبان انتخاب می شود و صفحه به منوی "تنظیم زبان" (Language Setup) باز می گردد
– برای محو کردن منوی تنظیم، دکمه **MENU** را فشار دهید.

4:3 Letter Box - هنگامی که می خواهید کل درجه

۱۶:۹ بزرگنمایی صفحه دیسکهای دی وی را مشاهده کنید، این حالت را انتخاب کنید، حتی اگر تلویزیونی که دارید دارای درجه بزرگنمایی ۴:۳ باشد. نوارهای مشکی در بالا و ائین صفحه ظاهر می شوند.

4:3 Pan&Scan - در تلویزیونهای اندازه معمولی، هنگامی که می خواهید بخش مرکزی صفحه ۱۶:۹ را مشاهده کنید، این حالت را انتخاب کنید. (بخش انتهایی چپ و راست تصویر فیلم بریده خواهند شد.)

16:9 Wide - می توانید تصویر کامل ۱۶:۹ را در تلویزیون صفحه پهن خود مشاهده کنید.



۱ پیام روی صفحه (Screen Messages)

برای روشن یا خاموش کردن پیامهای روی صفحه از آن استفاده کنید.

۱ درجه سیاهی (Black Level)

روشنایی صفحه را تنظیم می کند. (روشن (On) یا خاموش (Off)) این مورد در حالت تدریجی عمل نمی کند.

۱ سیستم تلویزیون (TV System)

- خورکار

NTSC - در صورت استفاده کردن از دیسکهای

• اگر سیستم تلویزیون شما فقط دارای ورودی ویدئویی PAL است، باید "PAL" را انتخاب کنید. هنگامی که "PAL" را انتخاب می کنید، فرمت خروجی آمیخته، خروجی PAL ۶۰ هرتزی است.

• اگر سیستم تلویزیون شما فقط دارای ورودی NTSC است، باید "NTSC" را انتخاب کنید.

- PAL: در صورت استفاده کردن از دیسک PAL

• اگر سیستم تلویزیون شما فقط دارای ورودی ویدئویی NTSC است، باید "NTSC" را انتخاب کنید.

• اگر سیستم تلویزیون شما فقط دارای ورودی PAL می باشد، باید "PAL" را انتخاب کنید.



۱ PCM Down Sampling (نمونه گیری PCM)

- On: این مورد را هنگامی که آمپلی فایر وصل شده به پخش کننده با حالت ۹۶ کیلو هرتز سازگار نباشد انتخاب کنید. در این حالت، سیگنالهای ۹۶ کیلو هرتز به ۴۸ کیلو هرتز تبدیل می شوند.

- Off: این مورد را هنگامی که آمپلی فایر وصل شده به پخش کننده با حالت ۹۶ کیلو هرتز سازگار است انتخاب کنید. در این حالت، تمامی سیگنالها بدون هیچگونه تغییری خارج می شوند.

۱ روشن موسیقی

- برای روشن کردن موسیقی رایش کنید.

- برای خاموش کردن موسیقی رایش کنید.

تذکر

حتی هنگامی که PCM Down sampling روی Off باشد

• برخی از دیسکها فقط صدای نمونه گیری شده در سطح پائینتر را از طریق خروجیهای دیجیتال خارج می کنند.

تحت امتیاز Dolby Laboratories ساخته شده. علامت

های "Dolby" و "double-D" علامت تجاری Dolby

Laboratories می باشند.

"DTS" و "DTS Digital Out" علامت تجاری شرکت

Digital Theater Systems می باشند.

تنظیم کردن گزینه های نمایش

گزینه های نمایش شما را قادر می سازند تا عملکردهای مختلف ویدئویی پخش کننده را تنظیم کنید.

۱

در زمانی که دستگاه در حالت توقف است، دکمه Menu را فشار دهید.

۲

دکمه های ▲/▼ را برای انتخاب Setup فشار داده، سپس دکمه ENTER یا فشار دهید.

۳

دکمه های ▲/▼ را برای انتخاب تنظیم نمایش (Display Setup) فشار داده، سپس دکمه ENTER یا فشار دهید.

۴

دکمه های ▲/▼ را برای انتخاب زبان دلخواه فشار دهید، سپس ENTER یا فشار دهید.

۱ تناسب کادر TV (TV Aspect)

بر اساس نوع تلویزیونی که دارید، ممکن است بخواهید که تنظیمات صفحه را تنظیم کنید (درجه بزرگنمایی).

تغییر دادن منوی تنظیم

❶ خروجی ویدیو (Video Output)

- Component (I-SCAN) : هنگامی که می خواهید از خروجی کامپوننت آمیخته (525i) استفاده شود، آن را انتخاب کنید.
- Component (P-SCAN) : هنگامی که می خواهید از خروجی کامپوننت تدریجی (525p) استفاده شود، آن را انتخاب کنید.

- اگر انتخاب Yes/No در منوی فرعی Display Setup ظرف ۱۰ ثانیه انتخاب نشود، صفحه به منوی قبل باز می گردد.



- برای دانستن اینکه آیا تلویزیون شما از اسکن تدریجی پشتیبانی می کند به دفترچه راهنمای استفاده کننده تلویزیون خود مراجعه کنید. اگر اسکن تدریجی پشتیبانی می شود، تنظیمات اسکن تدریجی دفترچه در راهنمای کاربر تلویزیون خود را در منوی سیستم تلویزیون دنبال کنید.
- اگر Video Output بطور غلط تنظیم شود، صفحه ممکن است قفل گردد.

تنظیم کردن کنترل والدین

عملکرد کنترل والدین با دی وی دی هایی که به آنان در چه بندی تخصیص داده شده است عمل می کند، که به شما در کنترل انواع دی وی دی هایی که خانواده شما مشاهده می کند، کمک می کند. ۸ نوع سطح درجه بندی در یک دیسک وجود دارد.



در زمانی که دستگاه در حالت توقف است، دکمه Menu را فشار دهید.

دکمه های ▲/▼ را برای انتخاب Setup فشار داده، سپس دکمه ► یا ENTER را فشار دهید.

دکمه های ▲/▼ را برای انتخاب "تنظیم والدین (Parental Setup)" فشار داده، سپس دکمه ► یا ENTER را فشار دهید.

❷

دکمه ▲/▼ را برای انتخاب "درجه بندی سنی (Level Rating)" فشار داده، سپس دکمه ► یا ENTER را فشار دهید. By default, password is set to 0000.

برای فعال کردن قابلیت کنترل والدین، اسم رمز را از 0000 تغییر دهید.

❸

دکمه های ▲/▼ را برای انتخاب سطح درجه بندی که می خواهید فشار داده، سپس دکمه ► یا ENTER را فشار دهید.

(مثال) تنظیم کردن در "سطح 6 (Level 6)".

برای محو کردن منوی تنظیم، دکمه MENU را فشار دهید.

برای مثال، اگر سطح ۶ را انتخاب کنید، دیسک هایی که سطح ۷ یا ۸ باشند پخش نخواهند شد.

تغییر دادن کلمه عبور

❹


در زمانی که دستگاه در حالت توقف است، دکمه Menu را فشار دهید.

❺

دکمه های ▲/▼ را برای انتخاب Setup فشار داده، سپس دکمه ► یا ENTER را فشار دهید.

❻

دکمه های ▲/▼ را برای انتخاب "تنظیم والدین (Parental Setup)" فشار داده، سپس دکمه ► یا ENTER را فشار دهید. صفحه "رمز را وارد کنید (Enter Password)" ظاهر می شود. کلمه عبور خود را وارد کنید.



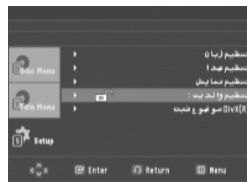


دکمه های ▲/▼ را برای انتخاب "رمز را عوض کنید" (Change Password)

فشار داده، سپس دکمه ▶ یا ENTER را فشار دهید.

کلمه رمز جدید خود را وارد کنید.

کلمه رمز جدید خود را مجدداً وارد کنید.

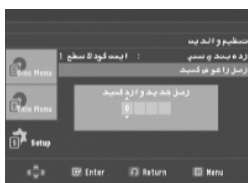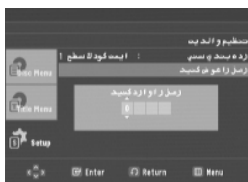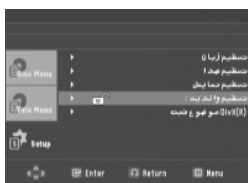

تذکر

اگر کلمه عبور خود را فراموش کرده اید، به "فراموش کردن کلمه عبور" در راهنمای عیب یابی مراجعه کنید.

ارتقای سفت افزار

ارتقای سفت افزار

از طریق سایت اینترنت (www.samsung.com) ، اغلب از ارتقای نرم افزار برای بهبود عملکرد این دستگاه به آخرین وضعیت پشتیبانی می کند.

ویژه جدید ادامه پیدا می کند و آن نمایان می شود. بهبودهای اجرا شده بستگی به نرم افزار ارتقایی که استفاده می کنید دارد. با اضافه نرم افزاری که پخش کننده دی وی قبل از ارتقاء داشت.

چطور یک دیسک ارتقای درست کنید

فایل داون لود شده را با استفاده از تنظیمات زیر، بر روی یک دیسک CD-R یا CD-RW خالی بنویسید.

۱

بایستی یک فایل جدید را از طریق مرکز داون لود سایت اینترنت Samsung (www.samsung.com) داون لود کنید


۲

با استفاده از CD-RW کامپیوتر خود، فایل را به دیسک بنویسید.

روال ارتقاء

۱

سینی دیسک را باز کنید. دیسک را بر روی سینی بگذارید. سینی را ببندید. صفحه ارتقای سفت افزار نمایان می شود.

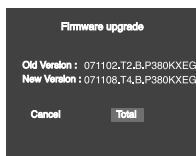

ارتقای سفت افزار در صفحه نمایش نمایان می شود

۲

جهت انتخاب Total (جمع)، دکمه < / > را فشار داده، سپس دکمه ENTER را فشار دهید



ارتقای سفت افزار شروع می شود

۳

دکمه ▲/▼ را برای انتخاب زبان مورد نظر فشار دهید.



تذکر

- اگر "زبان منو انتخاب شود" (Select Menu Language) نمایان نشد، لطفاً با "مرکز تعمیر Samsung" تماس بگیرید.
- در حین ارتقاء، هیچ دکمه ای را فشار ندهد و سیم برق را نکشید.
- روال ارتقاء ممکن است تغییر کند، به وب سایت رجوع شود. (www.samsung.com)

قبل از درخواست خدمات (عیب یابی)، لطفاً موارد زیر را بررسی کنید.

مشکل	اقدام	صفحه
هیچ عملی را نمی توان با استفاده از کنترل از راه دور انجام داد.	- باتریهای کنترل از راه دور بررسی کنید. - ممکن است نیاز به تعویض داشته باشند. - با کنترل از راه دور از فاصله ای بیشتر از ۲۰ فوت کار نکنید. - باتریها را در آورید و آنها را برای چند دقیقه نگاه دارید تا ریزپردازنده داخل کنترل از راه دور را بازنشانی کنید. باتریها را دوباره نصب کنید و سعی کنید تا دوباره با کنترل از راه دور کار کنید.	P۳
دیسک پخش نمی شود.	- مطمئن شوید که دیسک بصورتی که برچسب آن رو به بالا باشد، قرار گرفته است. - کد منطقه دی وی دی را بررسی کنید.	P۵
شمایل روی صفحه ظاهر می شود.	- ویژگیها یا اقدام مربوطه در این زمان نمی تواند انجام داده شود چون: ۱. نرم افزار دی وی دی آن را ممنوع کرده است. ۲. نرم افزار دی وی دی این ویژگی را پشتیبانی نمی کند (مثال، زوایا). ۳. این ویژگی در این زمان موجود نیست. ۴. شما شماره عنوان یا شماره فصل یا جستجوی زمانی را درخواست کرده اید که خارج از محدوده است.	
Disc Menu ظاهر نمی شود.	بررسی کنید که دیسک دارای منو باشد.	
حالت پخش با انتخاب Setup Menu متفاوت است.	برخی از عملکردهای انتخاب شده در Setup Menu، اگر دیسک با عملکرد مربوطه رمز گذاری نشده باشد، ممکن است بدرستی کار نکنند.	P۲۴-۲۹
screen ratio را نمی توان تغییر داد.	درجه صفحه در دی وی دی های شما ثابت شده است.	P۲۷-۲۸
بدون صدا.	مطمئن شوید که Digital Output صحیح را در منوی Audio Options انتخاب کرده اید.	P۲۶-۲۷
صفحه قفل شده است.	دکمه در حالیکه دیسکی در داخل نباشد را برای بیشتر از ۵ ثانیه فشار دهید. تمامی تنظیمات به تنظیمات کارخانه برگشت می کند.	P۱۴
فراموش کردن کلمه عبور	دکمه در حالیکه دیسکی در داخل نباشد را برای بیشتر از ۵ ثانیه فشار دهید. تمامی تنظیمات و همچنین کلمه عبور به تنظیمات کارخانه برگشت خواهند نمود. این حالت را استفاده نکنید مگر واقعاً بدان نیاز داشته باشید.	P۲۹
اگر با مشکلات دیگری مواجه شدید.	- به فهرست مطالب بروید و بخش کتابچه راهنما که حاوی توضیحات مربوط به مشکل جاری است را پیدا کرده و دستور العمل را یکبار دیگر دنبال کنید. - اگر باز هم مشکل حل نشد، لطفاً با نزدیکترین مرکز خدمات مجاز تماس بگیرید.	
تصویر دارای نویز بوده یا تصویر خراب است	- مطمئن شوید که دیسک کثیف نبوده یا خراش بر نداشته باشد. - دیسک را تمیز کنید.	P۲

ارتقای سفت افزار

مشخصات

عمومی	نیازهای قدرت		AC (متناوب) ۲۴۰-۱۱۰ ولت، ۶۰/۵۰ هرتز
	مصرف برق		۸ وات
	وزن		۱,۳ کیلوگرم
	ابعاد	DVD-P9191	۳۶۰mm (عرض) × ۲۰۳mm (ارتفاع) × ۳۷mm (ظزل)
دیسک	محدوده درجه حرارت عملیاتی		۵+ تا ۲۵- درجه سانتی گراد
	محدوده رطوبت عملیاتی		۱۰٪ تا ۵۷٪
	DVD (دیسک چند منظوره دیجیتال)		سرعت خواندن: ۴,۹۹ ~ ۴,۰۶ متر/ثانیه زمان پخش تخمینی (یک طرفه، دیسک تک لایه ای): ۱۲۵ دقیقه
	CD : ۱۲ سانتی متر (دیسک فشرده)		سرعت خواندن: ۴,۸ ~ ۵,۶ متر/ثانیه حداکثر زمان پخش: ۷۴ دقیقه
خروجی تصویر	CD : ۸ سانتی متر (دیسک فشرده)		سرعت خواندن: ۴,۸ ~ ۵,۶ متر/ثانیه حداکثر زمان پخش: ۲۰ دقیقه
	VCD : ۱۲ سانتی متر		سرعت خواندن: ۴,۸ ~ ۵,۶ متر/ثانیه حداکثر زمان پخش: ۷۴ دقیقه (ویدئو + صدا)
	ویدئوی مرکب		۱ کانال : ۱,۰ ولت پیک تو پیک (۷۵ اهم بار)
	ویدئو کامپوننت		Y : ۰,۱ ولت پیک تو پیک (۷۵ اهم بار) Pr : ۰,۷۰ ولت پیک تو پیک (۷۵ اهم بار) Pb : ۰,۷۰ ولت پیک تو پیک (۷۵ اهم بار)
خروجی صدا	۲ کانال		L(1/L), R(2/R)
	*پاسخ فرکانس		نمونه گیری ۴۸ کیلو هرتز : ۴ تا ۲۲ کیلو هرتز نمونه گیری ۹۶ کیلو هرتز : ۴ تا ۴۴ کیلو هرتز
	*نسبت S/N		۱۱۰ دسی بل
	*محدوده دینامیک		۱۰۰ دسی بل
	*مقدار کل اعوجاج هارمونیک		۰,۰۰۴٪

*: مشخصات اسمی

- شرکت Samsung Electronics با مسئولیت محدود حق تغییر مشخصات بدون اعلام را برای خود محفوظ نگاه می دارد.
- وزن و ابعاد تخمینی می باشند.

با SAMSUNG WORLD WIDE تماس حاصل فرمایید
اگر درباره هر یک از محصولات Samsung سوال یا نظری دارید. لطفاً با مرکز خدمات
رسانه به مشتریان SAMSUNG تماس حاصل نمایید.

Region	Country	Customer Care Center ☎	Web Site
North America	CANADA	1-800-SAMSUNG(726-7864)	www.samsung.com/ca
	MEXICO	01-800-SAMSUNG(726-7864)	www.samsung.com
	U.S.A	1-800-SAMSUNG(726-7864)	www.samsung.com
Latin America	ARGENTINE	0800-333-3733	www.samsung.com/ar
	BRAZIL	0800-124-421 , 4004-0000	www.samsung.com
	CHILE	800-SAMSUNG(726-7864)	www.samsung.com/cl
	NICARAGUA	00-1800-5077267	
	HONDURAS	800-7919267	
	COSTA RICA	0-800-507-7267	www.samsung.com/latin
	ECUADOR	1-800-10-7267	www.samsung.com/latin
	EL SALVADOR	800-6225	www.samsung.com/latin
	GUATEMALA	1-800-299-0013	www.samsung.com/latin
	JAMAICA	1-800-234-7267	www.samsung.com/latin
	PANAMA	800-7267	www.samsung.com/latin
	PUERTO RICO	1-800-682-3180	www.samsung.com/latin
	REP. DOMINICA	1-800-751-2676	www.samsung.com/latin
	TRINIDAD & TOBAGO	1-800-SAMSUNG(726-7864)	www.samsung.com/latin
Europe	VENEZUELA	0-800-100-5303	www.samsung.com/latin
	COLOMBIA	01-8000112112	www.samsung.com.co
	BELGIUM	0032 (0)2 201 24 18	www.samsung.com/be
	CZECH REPUBLIC	844 000 844 Distributor pro Českou republiku: Samsung Zrt., česká organizační složka Vyskočilova 4, 14000 Praha 4	www.samsung.com/cz
	DENMARK	70 70 19 70	www.samsung.com/dk
	FINLAND	030-6227 515	www.samsung.com/fi
	FRANCE	3260 SAMSUNG (€ 0,15/Min), 08 25 08 65 65 (€ 0,15/Min)	www.samsung.com
	GERMANY	01805 - SAMSUNG(726-7864) (€ 0,14/Min)	www.samsung.com
	HUNGARY	06-80-SAMSUNG(726-7864)	www.samsung.com
	ITALIA	800-SAMSUNG(726-7864)	www.samsung.com
	LUXEMBURG	0035 (0)2 261 03 710	www.samsung.com/be
	NETHERLANDS	0900-SAMSUNG(726-7864) (€ 0,10/Min)	www.samsung.com/nl
	NORWAY	815-56 480	www.samsung.com/no
	POLAND	0 801 801 881 , 022-607-93-33	www.samsung.com/pl
	PORTUGAL	80820-SAMSUNG(726-7864)	www.samsung.com/pt
	SLOVAKIA	0800-SAMSUNG(726-7864)	www.samsung.com/sk
	SPAIN	902 10 11 30	www.samsung.com
	SWEDEN	0771-400 200	www.samsung.com/se
	U.K	0845 SAMSUNG (7267864)	www.samsung.com
CIS	EIRE	0818 717 100	www.samsung.com/ie
	AUSTRIA	0800-SAMSUNG(726-7864)	www.samsung.com/at
	SWITZERLAND	0800-SAMSUNG(726-7864)	www.samsung.com/ch
	RUSSIA	8-800-555-55-55	www.samsung.com
	KAZAHSTAN	8-10-800-500-55-500	www.samsung.kz
	UZBEKISTAN	8-10-800-500-55-500	www.samsung.uz
	KYRGYZSTAN	00-800-500-55-500	
	TADJIKISTAN	8-10-800-500-55-500	
	UKRAINE	8-800-502-0000	www.samsung.com
	LITHUANIA	8-800-77777	www.samsung.lt
Asia Pacific	LATVIA	800-7267	www.samsung.com/lv
	ESTONIA	800-7267	www.samsung.ee
	AUSTRALIA	1300 362 603	www.samsung.com
	NEW ZEALAND	0800SAMSUNG(726-7864)	www.samsung.com/nz
	CHINA	800-810-5858 , 010-6475 1880	www.samsung.com
	HONG KONG	3698-4698	www.samsung.com/hk
	INDIA	3030 8282 , 1800 110011	www.samsung.com
	INDONESIA	0800-112-8888	www.samsung.com
	JAPAN	0120-327-527	www.samsung.com/jp
	MALAYSIA	1800-88-9999	www.samsung.com/my
	PHILIPPINES	1800-10-SAMSUNG(726-7864)	www.samsung.com/ph
	SINGAPORE	1800-SAMSUNG(726-7864)	www.samsung.com
	THAILAND	1800-29-3232 , 02-689-3232	www.samsung.com
	TAIWAN	0800-329-999	www.samsung.com/tw
Middle East & Africa	VIETNAM	1 800 588 889	www.samsung.com
	TURKEY	444 77 11	www.samsung.com
	SOUTH AFRICA	0860-SAMSUNG(726-7864)	www.samsung.com
	U.A.E	800-SAMSUNG (726-7864), 8000-4726	www.samsung.com

memo



DVD Player user manual

imagine the possibilities

Thanks you for purchasing this Samsung product.
To receive more complete service, please register
your product at

www.samsung.com/global/register

precautions

1. Setting up

- Refer to the identification label located on the rear of your player for its proper operating voltage.
- Install your player in a cabinet with adequate ventilation holes. (7~10cm) Do not block ventilation holes on any of the components for air circulation.
- Do not push the disc tray in by hand.
- Do not stack components.
- Be sure to turn all components off before moving the player.
- Before connecting other components to this player, be sure to turn them off.
- Be sure to remove the disc and turn off the player after use, especially if you are not going to use it for a long time.
- The mains plug is used as a disconnect device and shall stay readily operable at any time.

2. For your safety

- This product utilizes a laser. Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.
- Do not open covers and do not repair yourself. Refer servicing to qualified personnel.

3. Caution

- Your player is not intended for industrial use but for domestic purposes. Use of this product is for personal use only.
- Apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the apparatus.
- Exterior influences such as lightning and static electricity can affect normal operation of this player. If this occurs, turn the player off and on again with the POWER button, or disconnect and then reconnect the AC power cord to the AC power outlet. The player will operate normally.
- When condensation forms inside the player due to sharp changes in temperature, the player may not operate correctly. If this occurs, leave the player at room temperature until the inside of the player becomes dry and operational.

4. Disc

- Do not clean disc using record-cleaning sprays, benzene, thinner, or other volatile solvents that may cause damage to the disc surface.
- Do not touch the disc's signal surface. Hold by the edges or by one edge and the hole in the center.
- Wipe the dirt away gently; never wipe a cloth back and forth over the disc.

5. Environmental info

- The battery used in this product contains chemicals that are harmful to the environment.
- So, dispose of batteries in the proper manner, according to federal, state, and local regulations.

The product unit accompanying this user manual is licensed under certain intellectual property rights of certain third parties. This license is limited to private non-commercial use by end-user consumers for licensed contents. No rights are granted for commercial use. The license does not cover any product unit other than this product unit and the license does not extend to any unlicensed product unit or process conforming to ISO/OUR 11172-3 or ISO/OUR 13818-3 used or sold in combination with this product unit. The license only covers the use of this product unit to encode and/or decode audio files conforming to the ISO/OUR 11172-3 or ISO/OUR 13818-3. No rights are granted under this license for product features or functions that do not conform to the ISO/OUR 11172-3 or ISO/OUR 13818-3.

CAUTION: USE OF ANY CONTROLS, ADJUSTMENTS, OR PROCEDURES OTHER THAN SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE.

BEFORE YOU START


Accessories



Remote Control



Video/Audio
Cable




User's Manual

The accessories which do not supplied.

- Battery AAA
- Component Cable
- Coaxial Cable

Install Batteries in the Remote control

1. Open the battery cover on the back of the remote control.
2. Insert two AAA batteries.
Make sure that the polarities (+ and -) are aligned correctly.
3. Replace the battery cover.

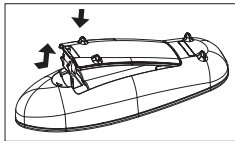

If remote control doesn't operate properly:

- Check the polarity + - of the batteries (Dry-Cell)
- Check if the batteries are drained.
- Check if remote control sensor is blocked by obstacles.
- Check if there is any fluorescent lighting nearby.

TABLE OF CONTENTS

Precautions	2
Before you start	3

Setup

General Features	4
Disc Type and Characteristics	5
Description	6
Tour of the Remote Control	8

Connections

Choosing a Connection	9
-----------------------	---

Basic Functions

Playing a Disc	14
Using the Search and Skip Functions	15
Using the Display Function	15
Using the Disc and Title Menu	15
Repeat Play	16
Slow Play	16

Advanced Functions

Adjusting the Aspect Ratio (EZ View)	17
Selecting the Audio Language	17
Selecting the Subtitle Language	18
Changing the Camera Angle	18
Using the Bookmark Function	19
Using the Zoom Function	19
Clips Menu for MP3/WMA/JPEG/MPEG4/ CD Audio	19
Folder Selection	20
MP3/WMA/CD Audio Playback	20
MPEG4 Playback	21
Picture CD Playback	22

Changing Setup Menu

Using the Setup Menu	24
Setting Up the Language Features	24
Setting Up the Audio Options	25
Setting Up the Display Options	26
Setting Up the Parental Control	27

Reference

Firmware upgrade	29
Troubleshooting	30
Specifications	31

General Features

Excellent Sound

Dolby Digital, a technology developed by Dolby Laboratories, provides crystal clear sound reproduction.

Screen

Both regular and widescreen(16:9) pictures can be viewed.

Slow Motion

An important scene can be viewed in slow motion.

Parental Control (DVD)

The parental control allows users to set the level necessary to prohibit children from viewing harmful movies such as those with violence, adult subject matter, etc.

Various On-Screen Menu Functions

You can select various languages (Audio/Subtitle) and screen angles while enjoying movies.

Progressive Scan

Progressive scanning creates an improved picture with double the scan lines of a conventional interlaced picture.

EZ VIEW (DVD)

Easy View enables picture adjustment to match your TV's screen size (16:9 or 4:3).

Digital Photo Viewer (JPEG)

You can view Digital Photos on your TV.

Repeat

You can repeat a song or movie simply by pressing the REPEAT button.

MP3/WMA

This unit can play discs created from MP3/WMA files.

MPEG4

This unit can play MPEG4 formats within an avi file.

Note

- Discs which cannot be played with this player.
 - DVD-ROM
 - DVD-RAM
 - CD-ROM
 - CDV
 - CDI
 - CVD
- CDGs play audio only, not graphics.
- Ability to play back may depend on recording conditions.
 - DVD-R, +R
 - CD-RW
 - DVD+RW, -RW (V mode)
- The unit may not play certain CD-R, CD-RW and DVD-R due to the disc type or recording conditions.

COPY PROTECTION

Many DVD discs are encoded with copy protection. Because of this, you should only connect your DVD player directly to your TV, not to a VCR. Connecting to a VCR results in a distorted picture from copy-protected DVD discs.

This product incorporates copyright protection technology that is protected by methods claims of certain U.S. patents and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protection technology must be authorized by Macrovision Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision Corporation. Reverse engineering or disassembly is prohibited.

PROGRESSIVE SCAN OUTPUTS (525p)

"CONSUMERS SHOULD NOTE THAT NOT ALL HIGH DEFINITION TELEVISION SETS ARE FULLY COMPATIBLE WITH THIS PRODUCT AND MAY CAUSE ARTIFACTS TO BE DISPLAYED IN THE PICTURE. IN CASE OF 525 PROGRESSIVE SCAN PICTURE PROBLEMS, IT IS RECOMMENDED THAT THE USER SWITCH THE CONNECTION TO THE 'STANDARD DEFINITION' OUTPUT. IF THERE ARE QUESTIONS REGARDING YOUR TV SET COMPATIBILITY WITH THIS MODEL 525p DVD PLAYER, PLEASE CONTACT SAMSUNG'S CUSTOMER SERVICE CENTER."

Disc Type and Characteristics

This DVD player is capable of playing the following types of discs with the corresponding logos:

Disc Types (Logos)	Recording Types	Disc Size	Max. Playing Time	Characteristics
DVD 	Audio + Video	12 Cm	Single-sided 240 min. Double-sided 480 min.	- DVD contains excellent sound and video due to Dolby Digital and MPEG-2 system. - Various screen and audio functions can be easily selected through the on-screen menu.
		8 Cm	Single-sided 80 min. Double-sided 160 min.	
VIDEO-CD 	Audio + Video	12 Cm	74 min.	- Video with CD sound, VHS quality & MPEG-1 compression technology.
		8 Cm	20 min.	
AUDIO-CD 	Audio	12 Cm	74 min.	- CD is recorded as a Digital Signal with better audio quality, less distortion and less deterioration of audio quality over time.
		8 Cm	20 min.	

Disc Markings

	Play Region Number
	PAL broadcast system in U.K, France, Germany, etc.
	Dolby Digital disc
	Stereo disc
	Digital Audio disc
	DTS disc
	MP3 disc

You must only insert one DVD disc at a time. Inserting two or more discs will not allow to play them back and it may cause damage to the DVD player.

Region Number

Both the DVD player and the discs are coded by region. These regional codes must match in order for the disc to play. If the codes do not match, the disc will not play.

The Region Number for this player is described on the rear panel of the player.

DivX Certification



DivX, DivX Certified, and associated logos are trademarks of DivXNetworks, Inc and are used under license

setup

Description

Front Panel Controls



1. POWER ON/OFF (⏻)

Turn On/Off and the player is turned On/Off.

2. DISC TRAY

Place the disc here.

3. DISPLAY

Operation indicators are displayed here.

4. OPEN/CLOSE (▲)/STOP (■)

Press to open and close the disc tray/ Stops disc play.

5. PLAY/PAUSE (▶||)

Begin or pause disc play.

Front Panel Display




Total playing time/Displays various messages concerning operations such as PLAY, STOP, LOAD ...

noDISC: No disc loaded.

OPEn: The disc tray is open.

LOAd: Player is loading disc information.

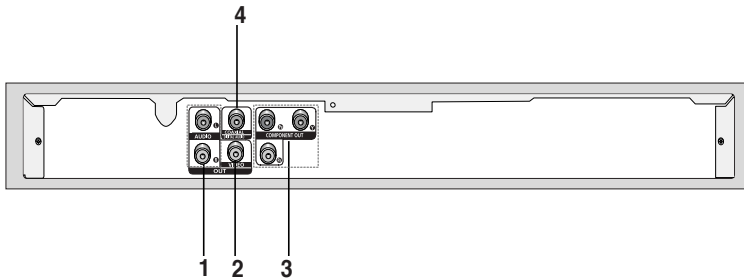

1. AUDIO OUT JACKS

- Connect to the Audio input jacks of your television or audio/video receiver.

2. VIDEO OUT JACK

- Use a video cable to connect to the Video input jack on your television.

3. COMPONENT VIDEO OUT JACKS

- Use these jacks if you have a TV with Component Video in jacks. These jacks provide P_R , P_B and Y video.
- If P-SCAN Video Output is selected in Setup Menu, progressive scan mode will work.
- If I-SCAN Video Output is selected in Setup Menu, interlaced scan mode will work.


4. DIGITAL AUDIO OUT JACKS

- Use either a coaxial digital cable to connect to a compatible Dolby Digital receiver.
- Use either a coaxial digital cable to connect to an A/V Amplifier that contains a Dolby Digital, MPEG2 or DTS decoder.

Note

- Consult your TV User's Manual to find out if your TV supports Progressive Scan. If Progressive Scan is supported, follow the TV User's Manual regarding Progressive Scan settings in the TV's menu system.
- See pages 26-27 to get more information on how to use the setup menu.

Tour of the Remote Control

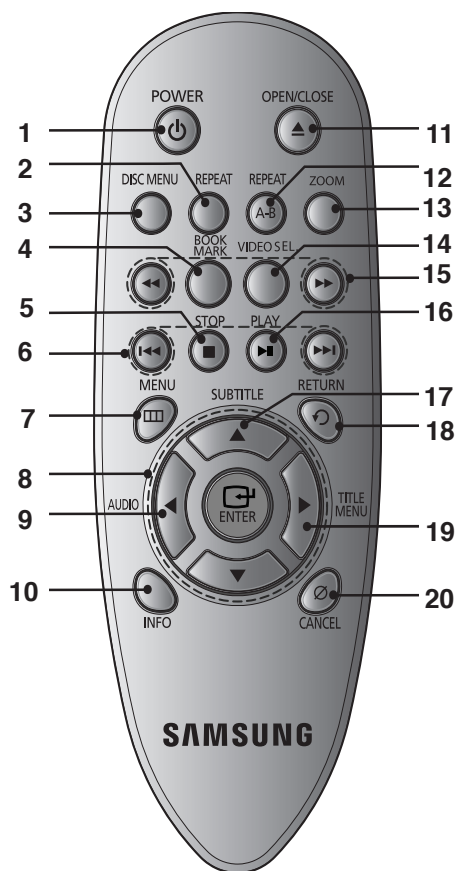

- 1. DVD Power Button**
Turns the power on or standby.
- 2. REPEAT Button**
Allows you to repeat play a title, chapter, track, or disc.
Returns to a previous menu.
- 3. DISC MENU Button**
Brings up the Disc menu.
- 4. BOOKMARK Button**
Quickly find bookmark sections of a DVD.
- 5. STOP Button (■)**
Use to stop playback.
- 6. SKIP Buttons (◀◀ / ▶▶)**
Use to skip the title, chapter or track.
- 7. MENU Button**
Brings up the DVD player's menu.
- 8. ENTER/▲/▼, ◀/▶ Buttons**
This button functions as a toggle switch.
- 9. AUDIO Button**
Use this button to access various audio functions on a disc.
- 10. INFO Button**
Displays the current disc mode.
- 11. OPEN/CLOSE (▲) Button**
To open and close the disc tray
- 12. REPEAT A-B Button**
Allows you to repeat A-B disc.
- 13. ZOOM Button**
Enlarge DVD Picture
- 14. VIDEO SEL.Button**
Change video output mode
- 15. SEARCH Buttons (◀◀ / ▶▶)**
Allow you to search forward/backward through a disc.
- 16. PLAY/PAUSE Button (▶||)**
Begin/Pause disc play.
- 17. SUBTITLE Button**
Use to change subtitle.
- 18. RETURN Button**
Returns to a previous menu.
- 19. TITLE MENU Button**
Brings up the Title menu.
- 20. CANCEL Button**
Use to remove menus or status displays from the screen.

connections

Choosing a Connection

The following shows examples of connections commonly used to connect the DVD player with a TV and other components.

Before Connecting the DVD Player

- Always turn off the DVD player, TV, and other components before you connect or disconnect any cables.
- Refer to the user's manual of the additional components you are connecting for more information on those particular components.

Connection to a TV (For Video)

1


Using video/audio cables, connect the **VIDEO (yellow)/AUDIO (red and white) OUT** terminals on the rear of the DVD player to the **VIDEO (yellow)/AUDIO (red and white) IN** terminals of TV.

2

Turn on the DVD player and TV.

3

Press the **TV/VIDEO** button on the TV's remote control to select **Video**.

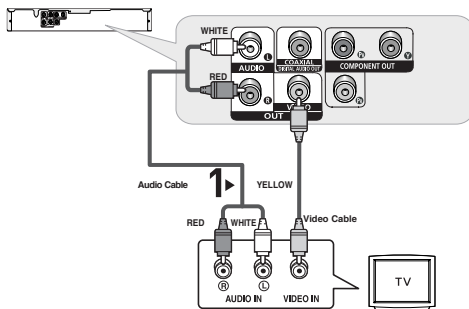

Note

- **Noise may be generated if the audio cable is too close to the power cable.**
- If you want to connect to an Amplifier, please refer to the Amplifier connection page. (See pages 12 to 14)
- The number and position of terminals can vary depending on your TV set. Please refer to the user's manual of the TV.
- If you press the VIDEO SEL. button when DVD Player is in stop mode or no disc is inserted, the Video Output mode changes in the following sequence: (I-SCAN → P-SCAN).

connections

Connection to a TV (Interlace)

- Connecting to your TV using Component video cables.
- You will enjoy high quality and accurate color reproduction images. Component video separates the picture element into black and white(Y), blue(P_B), red(P_R) signals to present clear and clean images. (Audio signals are delivered through the audio output.)

1

Using component video cables, connect the **COMPONENT VIDEO OUT** terminal on the rear of the DVD player to the **COMPONENT IN** terminal of TV.

2


Using the audio cables, connect the **AUDIO (red and white) OUT** terminals on the rear of the DVD player to the **AUDIO (red and white) IN** terminals of TV. Turn on the DVD player and TV.

3

Press the input selector on your TV remote control until the Component signal from the DVD player appears on the TV screen.

4

Set the Video Output to **I-SCAN** in the Display Setup menu. (See pages 26-27)

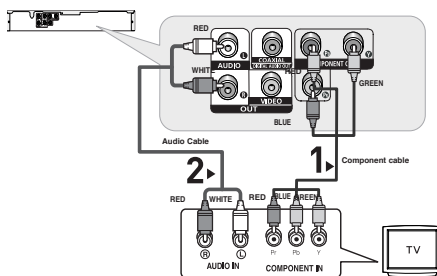

Note

- If you want to connect to an Amplifier, please refer to the Amplifier connection page. (See pages 12 to 13)
- The component terminal of TV can be marked by "R-Y, B-Y, Y" or "Cr, Cb, Y" instead of " P_R , P_B , Y" depending on the manufacturer. The number and position of terminals can vary depending on the TV set. Please refer to the user's manual of the TV.

Connection to a TV (Progressive)

1

Using component video cables, connect the **COMPONENT VIDEO OUT** terminal on the rear of the DVD player to the **COMPONENT IN** terminal of TV.

2


Using the audio cables, connect the **AUDIO (red and white) OUT** terminals on the rear of the DVD player to the **AUDIO (red and white) IN** terminals of TV. Turn on the DVD player and TV.

3

Press the input selector on your TV remote control until the Component signal from the DVD player appears on the TV screen.

4

Set the Video Output to **P-SCAN** in the Display Setup menu. (See pages 26-27)

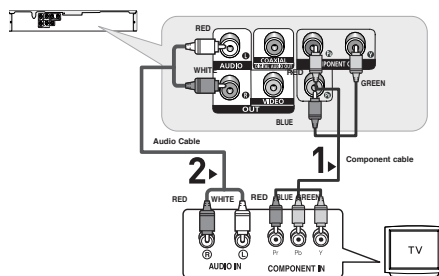

To see the progressive video output,

- Consult your TV User's Manual to find out if your TV supports Progressive Scan. If Progressive Scan is supported, follow the TV User's Manual regarding Progressive Scan settings in the TV's menu system.
- Depending on your TV, the connection method may differ from the illustration above.

Note

- What is "Progressive Scan"?
Progressive scan has twice as many scanning lines as the interlace output method has. Progressive scanning method can provide better and clearer picture quality.

connections

Connection to an Audio System (2 Channel Amplifier)

1

Using the audio cables, connect the **AUDIO (red and white) OUT** terminals on the rear of the DVD player to the **AUDIO (red and white) IN** terminals of the Amplifier.

2


Using the video signal cable(s), connect the **VIDEO, COMPONENT OUT** terminals on the rear of the DVD player to the **VIDEO, COMPONENT IN** terminal of your TV as described on pages 10 to 11.

3

Turn on the DVD player, TV, and Amplifier.

4

Press the input select button of the Amplifier to select **external input** in order to hear sound from the DVD player. Refer to your Amplifier's user manual to set the Amplifier's audio input.

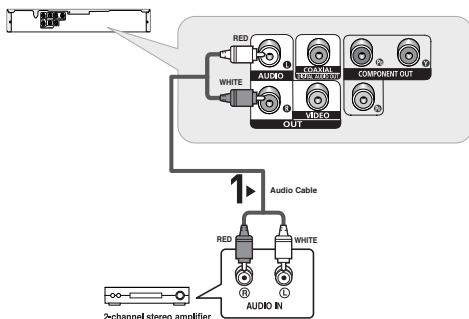

Note

- Please turn the volume down when you turn on the Amplifier. Sudden loud sound may cause damage to the speakers and your ears.
- Please set the audio in the menu screen according to the Amplifier. (See pages 25-26)
- The position of terminals can vary depending on the Amplifier. Please refer to the user's manual of the Amplifier.

Connection to an Audio System (Dolby Digital, MPEG2 or DTS Amplifier)

1

If using a coaxial cable, connect the **DIGITAL AUDIO OUT (COAXIAL)** terminal on the rear of the DVD player to the **DIGITAL AUDIO IN (COAXIAL)** terminal of the Amplifier.

2


Using the video signal cable(s), connect the **VIDEO, COMPONENT OUT** terminals on the rear of the DVD player to the **VIDEO, COMPONENT IN** terminal of your TV as described on pages 9 to 11.

3

Turn on the DVD player, TV, and Amplifier.

4

Press the input select button of the Amplifier to select **external input** in order to hear sound from the DVD player. Refer to your Amplifier's user manual to set the Amplifier's audio input.

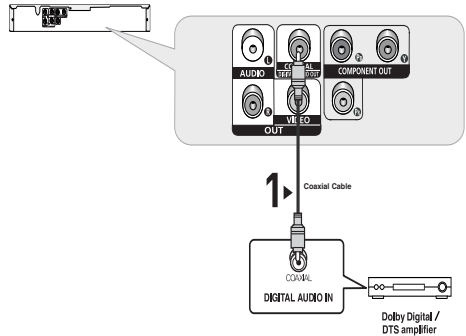

Note

- **Please turn the volume down when you turn on the Amplifier. Sudden loud sound may cause damage to the speakers and your ears.**
- Please set the audio in the menu screen according to the Amplifier. (See pages 25-26)
- The position of terminals can vary depending on the Amplifier. Please refer to the user's manual of the Amplifier.

basic functions

Playing a Disc

Before Play

- Turn on your TV and set it to the correct Video Input by pressing TV/VIDEO button on the TV remote control.
- If you connected an external Audio System, turn on your Audio System and set it to the correct Audio Input.

After plugging in the player, the first time you press the DVD **POWER** button, this screen comes up: If you want to select a language, press a ▲/▼ button. (This screen will only appear when you plug in the player for the first time.) If the language for the startup screen is not set, the settings may change whenever you turn the power on or off. Therefore, make sure that you select the language you want to use.

Once you select a menu language, you can change it by pressing the ► button on the front panel of the unit for more than 5 seconds with no disc in the unit. Then the **SELECT MENU LANGUAGE** window appears again where you can reset your preferred language.



Playback

1. Press the **OPEN/CLOSE** (▲) button.
2. Place a disc gently into the tray with the disc's label facing up.
3. Press the **PLAY/PAUSE** (►||) button or **OPEN/ CLOSE** (▲) button to close the disc tray.

-When you stop disc play, the player remembers where you stopped, so when you press **PLAY/PAUSE** (►||) button again, it will pick up where you left off.

4. Stopping Play

Press the **STOP** (■) button during play.

5. Removing Disc

Press the **OPEN/CLOSE** (▲) button.

6. Pausing Play

Press the **PLAY/PAUSE** (►||) button on the remote control during play.

- Screen stops, no sound.

To resume, press the **PLAY/PAUSE** (►||) button once again.

7. Step Motion Play (Except CD)

Press the **SKIP** button on the remote control during Pause mode.

- Each time the button is pressed, a new frame will appear.
- No sound is heard during STEP mode.
- Press the **PLAY/PAUSE** (►||) button to resume normal play.
- You can only perform step motion play in the forward direction.

8. Slow Motion Play

Press the **SEARCH** (◀◀/▶▶) button to choose the play speed between 1/2, 1/4 and 1/8 of normal during-PAUSE mode.

- No sound is heard during slow mode.
- Press the **PLAY/PAUSE** (►||) button to resume normal play.

Note

- If the player is left in the stop mode for more than one minute without any user interaction, a screen saver will be activated. Press the **PLAY/PAUSE** (►||) button to resume normal play.
- If the player is left in the stop mode for more than about 30 minutes, the power will automatically shut off. -(Automatic Power-Off Function)
- If the player is left for about 5 minutes in pause mode, it will stop.
- This (⊙) icon indicates an invalid button press.

Using the Search and Skip Functions

During play, you can search quickly through a chapter or track, and use the skip function to jump to the next selection.

Searching through a Chapter or Track

During play, press the **SEARCH** (◀ or ▶) button on the remote control for more than 1 second.

DVD	2X, 4X, 64X, 128X
VCD	4X, 8X
CD	2X, 4X, 8X

Note

- The speed marked in this function may be different from the actual playback speed.
- No sound is hearing during search mode (Except CD).

Skipping Tracks

During play, press the **SKIP** (◀◀ or ▶▶) button.

- When playing a DVD, if you press the SKIP (▶▶) button, it moves to the next chapter. If you press the SKIP (◀◀) button, it moves to the beginning of the chapter. One more press makes it move to the beginning of the previous chapter.
- When playing a VCD or a CD, if you press the SKIP (▶▶) button, it moves to the next track. If you press the SKIP (◀◀) button, it moves to the beginning of the track. One more press makes it move to the beginning of the previous track.
- If a track exceeds 15 minutes when playing a VCD and - you press the ▶▶ button, it moves forward 5minutes. If you press the ◀◀ button, it moves backward 5 minutes.

Note

When playing VCD the Disc Menu may not work.

Using the Display Function

When Playing a DVD/VCD/MPEG4

1. During play, press the **INFO** button on the remote control.
2. Press the ▲/▼ buttons to select the desired item.
 - When playing VCD the Disc Menu may not work.

3. Press the ◀/▶ buttons to make the desired setup and then press the **ENTER** button.
4. To make the screen disappear, press the **CANCEL** button.


Note

 Title	To access the desired title when there is more than one in the disc. For example, if there is more than one movie on a DVD, each movie will be identified.
 Chapter	Most DVD discs are recorded in chapters so that you can quickly find a specific passage (similar to tracks on an video CD).
 Track	
 Time	Allows playback of the film from a desired time. You must enter the starting time as a reference. The time search function does not operate on some disc.
 Audio	Refers to the language of the film soundtrack. In the example, the soundtrack is played in English 5.1CH. A DVD disc can have up to eight different soundtracks.
 Subtitle	Refers to the subtitle languages available in the disc. You will be able to choose the subtitle languages or, if you prefer, turn them off from the screen. A DVD disc can have up to 32 different subtitles.
 Shortcut	To access the desired Bookmark, Angle or EZ view function. Some DVD discs are have more angle function from any picture. Bookmark function make you easily and quickly to find a track or chapter from DVD or VCD. The EZ View funtion is use for changing the aspect ratio in DVD.

Using the Disc and Title Menu

Using the Disc Menu

1. During Stop mode, press the **MENU** button on the remote control.
2. Press the ▲/▼ buttons to select **Disc Menu**, then-press the ▶ or **ENTER** button.

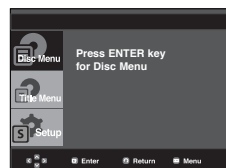


basic functions

Note

- Depending on a disc, the Disc Menu may not work.
- You can also use the Disc Menu, using the DISC MENU button on the remote control.
- When playing VCD the Disc Menu may not work.

Using the Title Menu

1. During stop mode, press the **MENU** button on the remote control.
2. Press the **▲/▼** buttons to select **Title Menu**, then press the **►** or **ENTER** button.

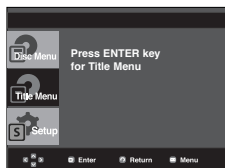

Note

- Depending on a disc, the Title Menu may not work.
- Title Menu will only be displayed if there are at least two titles in the disc.



Repeat Play

Repeat the current track, chapter, title, a chosen section (A-B), or all of the disc.

When playing a DVD/VCD

1. Press the **REPEAT** button on the remote control.
Repeat screen appears.
2. Press the **REPEAT** buttons to select **Chapter**, **Disc**, **Title** or off.
 - DVD repeats play by chapter or title, VCD repeat play by disc or track.
 - Chapter: repeats the chapter that is playing.
 - Title : repeats the title that is playing.
 - Disc : repeats the disc that is playing.
 - Track: repeats the track that is playing.


DVD/ VCD

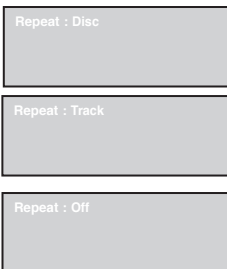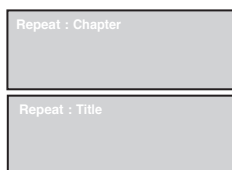

Using the A-B Repeat function

1. Press the **REPEAT A-B** button at the point where you want repeat play to start (A).
 2. Press the **REPEAT A-B** button at the point where you want the repeat play to stop (A-B).
- To return to normal play, press the **CANCEL** button.

DVD/ VCD

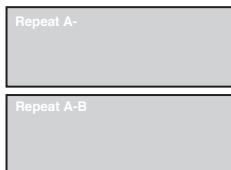

Note

- A-B REPEAT allows you to set point (B) until at least 10 seconds of play back time has elapsed after point (A) has been set
- Depending on a disc, the Repeat function may --not work.
- When playing VCD the Disc Menu may not work.

Slow Play

This feature allows you slowly to repeat scenes containing sports, dancing, musical instruments being played etc., so you can study them more closely.

When playing a DVD


1. During play, press the **PLAY/PAUSE** (**►||**) button.
2. Press the **SEARCH** (**◀||▶**) button to choose the play speed between 1/2, 1/4 and 1/8 of normal during PAUSE mode.

advanced functions

Adjusting the Aspect Ratio (EZ View)

To play back using aspect ratio (DVD)

1. During play, press the **INFO** button on the remote control.
2. Press the **▲/▼** buttons to select **Shortcut**.
3. Press the **◀/▶** buttons to select **EZ view**, then -press the **ENTER** button.
4. Press the **◀/▶** buttons to select desired item.

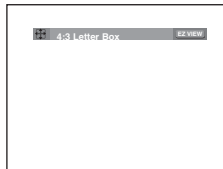

If you are using a 16:9 TV

For 16:9 aspect ratio discs

- NORMAL WIDE

Displays the content of the DVD title in 16:9 aspect ratio.

- SCREEN FIT

The top and bottom portions of the screen are cut off.
When playing a 2.35:1 aspect ratio disc, the black bars at the top and bottom of the screen will disappear. The picture will look vertically stretched. (Depending on a type of disc, the black bars may not disappear completely.)

- ZOOM FIT

The top, bottom, left and right of the screen are cut off and the central portion of the screen is enlarge

- VERTICAL FIT

When a 4:3 DVD is viewed on a 16:9 TV, black bars will appear at the left and right of the screen in order to prevent the picture from looking horizontally stretched.

For 4:3 aspect ratio discs

- NORMAL SCREEN

Displays the content of the DVD title in 16:9 aspect ratio.
The picture will look horizontally stretched.

- SCREEN FIT

The top and bottom portions of the screen are cut off and the full screen appears.
The picture will look vertically stretched.

- ZOOM FIT

The top, bottom, left and right portions of the screen are cut off and the central portion of the screen is enlarged.

If you are using a 4:3 TV

For 16:9 aspect ratio discs

- 4:3 Letter Box

Displays the content of the DVD title in 16:9 aspect ratio. The black bars will appear at the top and bottom of the screen.

- 4:3 Pan Scan

The left and right portions of the screen are cut off and the central portion of the 16:9 screen is displayed.

- SCREEN FIT

The top and bottom portions of the screen are cut off and a full screen appears. The picture will look vertically stretched.

- ZOOM FIT

The top, bottom, left and right of the screen are cut off and the central portion of the screen is enlarged.

For 4:3 aspect ratio discs

- NORMAL SCREEN

Displays the content of the DVD title in 4:3 aspect ratio.

- SCREEN FIT

The top and bottom portions of the screen are cut off and the full screen appears. The picture will look vertically stretched.

- ZOOM FIT

The top, bottom, left and right portions of the screen are cut off and the central portion of the screen is enlarged.

Note

This function may behave differently depending on the type of disc.

Selecting the Audio Language

You can select a desired audio language quickly and easily with the **AUDIO** button.

Using the **AUDIO** button (DVD/VCD/ MPEG4)

1. Press the **◀/AUDIO** button. The Audio changes when the button is pressed repeatedly.
-The audio languages are represented by abbreviations.

DVD



VCD



When playing a VCD you can select among **Stereo**, **Right** or **Left**.

advanced functions

Press **◀/Audio** button at remote repeatedly to select the desired Audio on MPEG4 then press the **ENTER**.

MPEG4



2. To remove the **AUDIO** icon, press the **CANCEL** or **RETURN** button.

Note

- This function depends on audio languages are encoded on the disc and may not work.
- A DVD disc can contain up to 8 audio languages.
- To have the same audio language come up whenever you play a DVD; Refer to "Using the Audio Language" on page 25.

Selecting the Subtitle Language

You can select a desired subtitle quickly and easily with the **SUBTITLE** button.


Using the SUBTITLE button (DVD/MPEG4)

1. Press the **▲/SUBTITLE** button. The subtitle languages are represented by abbreviations.

Press the **◀/▶** buttons to select desired item.



MPEG4

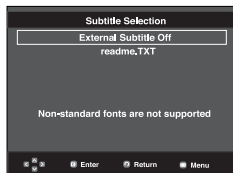

External Subtitle option will appear, depends on the DivX disc.

Press **▲/SUBTITLE** button at remote repeatedly to select the desired subtitle language on a MPEG4 then press the **ENTER**.

MPEG4



Note

- You have to change the desired subtitle in the Disc Menu, according to discs. Press the **DISC MENU** button.
- This function depends on what subtitles are encoded on the disc and may not work on all DVDs.
- A DVD disc can contain up to 32 subtitle languages.
- To have the same subtitle language come up whenever you play a DVD; Refer to "Using the Subtitle Language" on page 25.

Changing the Camera Angle

When a DVD contains multiple angles of a particular scene, you can use the **ANGLE** function.

Using the ANGLE button (DVD)

If the disc contains multiple angles, the **ANGLE** appears on the screen.

1. During play, press the **INFO** button on the remote control.
2. Press the **▲/▼** buttons to select **Shortcut**.
3. Press the **◀/▶** buttons to select **Angle**, then -press the **ENTER** button.



4. Press the **◀/▶** buttons on the remote control to select the desired angle.



Note

- If the disc has only one angle, this feature won't work. Currently, very few discs have this feature.
- Depending on the disc, these functions may not work.

Using the Bookmark Function

This feature lets you bookmark sections of a DVD or VCD so you can quickly find them at a later time.

Using the Bookmark Function (DVD/VCD)

1. During play, press the **INFO** button on the remote control.
2. Press the **▲/▼** buttons to select **Shortcut**.

DVD



VCD



3. Press the **◀/▶** buttons to select **Bookmark (except VCD)**, then press the **ENTER** button.
4. When you reach the scene you want to mark, press-the **ENTER** button. Up to three scenes may be marked at a time.



Note

- When playing VCD the Disc Menu may not work.
- Depending on a disc, the Bookmark function may not work.

Recalling a Marked Scene

- 1~3. The first 1~3 steps are the same as those for "Using the Bookmark Function".
4. Press the **◀/▶** buttons to select a marked scene.



5. Press the **PLAY/PAUSE (▶||)** button to skip to the marked scene.

Clearing a Bookmark



- 1~3. The first 1~3 steps are the same as those for "Using the Bookmark Function".
4. Press the **◀/▶** buttons to select the bookmark number you want to delete.
5. Press the **CANCEL** button to delete a bookmark number.



Using the Zoom Function

Using the Zoom Function (DVD/ VCD)

1. During play or pause mode, press the **ZOOM** button on the remote control, press the **ENTER** button.
2. Press the **▲/▼** / **◀/▶** buttons to select **the part of the screen you want to zoom in on**.
 - During DVD/VCD play, press **ENTER** to zoom in 2X/4X/2X/ Normal in order.

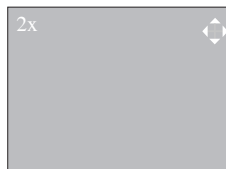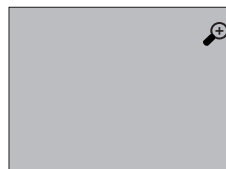

Clips Menu for MP3/WMA/ JPEG/ MPEG4/CD Audio

CD Audio or discs with MP3/WMA/JPEG/MPE4 contain individual songs and/or pictures that can be organized into folders as shown below. They are similar to how you use your computer to put files into different folders.

advanced functions

Open the disc tray.
Place the disc on the tray.
Close the tray.
The tray closes and this screen displays.



-  : Name of currently playing file.
-  : Current Playback Time.
-  : Current Playback Mode : There are four modes. They can be selected in order by pressing the **REPEAT** button.
 - Off: Normal Playback
 - Track: Repeats the current track.
 - Folder: Repeats the current folder
 - Random: Files in the disc will be played in random order.

-  : MP3 file icon. -  : CD Audio file icon.
-  : WMA file icon. -  : Folder icon.
-  : JPEG file icon -  : Current Folder icon.
-  : AVI file icon.

Folder Selection

The folder can be selected in Stop or Play mode.

- To select the Parent Folder


Press the **RETURN** button to go to parent folder, or press the **▲/▼** buttons to select “..” and press **ENTER** to go to the parent folder.

- To select the Peer Folder

Press the **▲/▼** buttons to select the desired folder, then press **ENTER**.

- To select the Sub-Folder

Press the **▲/▼** buttons to select the desired folder, then press **ENTER**.

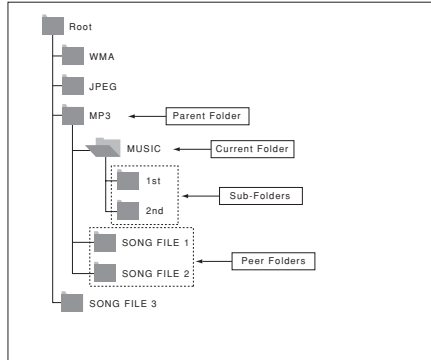

MP3/WMA/CD Audio Playback

1. Open the disc tray. Place the disc on the tray. Close the tray.
 - Only one kind of file is played back when a disc or a folder contains both MP3 and WMA files.
2. Press the **▲/▼** buttons to select a song file.
Press **ENTER** to begin playback of the song file.



Repeat/Random playback

Press the **REPEAT** button to change the playback mode. There are 4 modes, such as **Off**, **Track**, **Disc**, **Folder** and **Random**.

- Off: Normal Playback
- Track: Repeats the current song file.
- Disc : repeats the Disc that is playing.
- Folder: Repeats the song files which have the same extension in the current folder.
- Random: Song files which have the same extension will be played in random order.

To resume normal play, press the **CANCEL** button.

CD-R MP3/WMA file

When you record MP3 or WMA files on CD-R, please refer to the following.

- Your MP3 or WMA files should be ISO 9660 or JOLIET format.

ISO 9660 format and Joliet MP3 or WMA files are compatible with Microsoft's DOS and Windows, and with Apple's Mac. This format is the most widely used.

- When naming your MP3 or WMA files, do not exceed 8 characters, and enter ".mp3, .wma" as the file extension.

General name format : Title.mp3. or Title.wma. When composing your title, make sure that you use 8 characters or less, have no spaces in the name, and avoid the use of special characters including: (,./\,_,=,+).

- Use a decompression transfer rate of at least 128 Kbps when recording MP3 files.

Sound quality with MP3 files basically depends on the rate of compression/decompression you choose. Getting CD audio sound requires an analog/digital sampling rate, that is conversion to MP3 format, of at least 128 Kbps and up to 160 Kbps. However, choosing higher rates, like 192 Kbps or more, only rarely give better sound quality. Conversely, files with decompression rates below 128 Kbps will not be played properly.

- Use a decompression transfer rate of at least 64Kbps when recording WMA files.

Sound quality with WMA files basically depends on the rate of compression/decompression you choose.

Getting CD audio sound requires an analog/digital sampling rate, that is conversion to WMA format, of at least 64Kbps and up to 192Kbps. Conversely, files with decompression rates below 64Kbps or over 192Kbps will not be played properly.

- Do not try recording copyright protected MP3 files.

Certain "secured" files are encrypted and code protected to prevent illegal copying. These files are of the following types: Windows Media™ (registered trade mark of Microsoft Inc) and SDMI™ (registered trade mark of The SDMIFoundation). You cannot copy such files.

- Important:

The above recommendations cannot be taken as a guarantee that the DVD player will play MP3 recordings, or as an assurance of sound quality. You should note that certain technologies and methods for MP3 file recording on CD-Rs prevent optimal playback of these files on your DVD player (degraded sound quality and in some cases, inability of the player to read the files).

- This unit can play a maximum of 500 files and 500 folders per disc.

MPEG4 Playback

MPEG4 Play Function

AVI files are used to contain the audio and video data. Only

AVI format files with the ".avi" extensions can be played.

1. Open the disc tray. Place the disc on the tray.

Close the tray.

2. Press the ▲/▼ buttons to select an avi file (DivX/XviD) and then press ENTER button.



Repeat playback

Press the REPEAT button to change playback mode. There are 3 modes, such as Off, Folder, Track .

- Folder : repeats the AVI files which have the same extension in the current folder.
- Track: Repeats the current song file.

MPEG4 Function Description

Function	Description	Reference page
Skip (◀◀ or ▶▶)	During play, press the ◀◀ or ▶▶ button, it moves forward or backward 5 minutes.	-
Search (◀◀ or ▶▶)	During play, press the SEARCH (◀◀ or ▶▶) button and press again to search at a faster speed. Allows you to search at a faster speed in an AVI file. (2X, 4X, 8X)	-
Slow Motion Play	Allows you to search at a slower speed in an AVI file. (1/2X, 1/4X, 1/8X)	P 14
ZOOM	2X/4X/2X/Normal in order	P 19

- These functions may not work depending on MPEG4 file.

advanced functions

CD-R AVI file

This unit can play the following video compression formats within the AVI file format:

- DivX 3.11 contents
- DivX 4 contents (Based on MPEG-4 Simple Profile)
- DivX 5 contents (MPEG-4 simple profile plus additional features such as bi-directional frames. Qpel and GMC are also supported.)
- XviD MPEG-4 compliant Contents.

This unit supports all resolutions up to maximum below.


DivX3.11 & DivX4 & XviD	DivX5
Bitrate may fluctuate: Device may skip decoding the high bitrate portions and begin decoding again when Bitrate returns to normal.	720 x 480 @30fps 720 x 576 @25fps : Maximum bitrate : 4Mbps

Note

- Some MPEG-4 files created on a personal computer may not be play back. That is why Codec Type, Version and Higher resolution over specification is not supported.
- This unit supports CD-R/RW written in MPEG4 in accordance with the "ISO9660 format".

Picture CD Playback

1. Select the desired folder.
2. Press the **▲/▼** buttons to select a Picture file in the clips menu and then press the **ENTER** button.
3. Press the **INFO** button on the remote control to select the menu you want to view and then press the **ENTER** button.

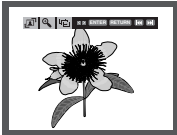

Note

- Press the **STOP** button to return to the clips menu.
- When playing a Kodak Picture CD, the unit displays the Photo directly, not the clips menu.

Rotation



: Each time the **ENTER** button is pressed, the picture rotates 90 degrees clockwise.

Zoom



: Press the **▲/▼** buttons to select the part of the screen you want to zoom in on. Press the **ENTER** button. Each time the **ENTER** button is pressed, the picture is enlarged up to 2X.

Slide Show



: The unit enters slide show mode.

- Before beginning the Slide Show, the picture interval must be set.




: When this icon is selected and **ENTER** is pressed, the pictures change automatically with about a 6 second interval.



: The pictures change automatically with about a 12 second interval.



: The pictures change automatically with about a 18 second interval.

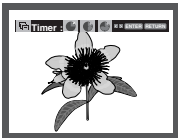

Note

- Depending on a file size, the amount of time --between each picture may be different from the --manual.
- If you don't press any button, the slide show will --start automatically in about 10 seconds by default.

CD-R JPEG Disc


- Only files with the ".jpg" and ".JPG" extensions can be played.
- If the disc is not closed, it will take longer to start playing and not all of the recorded files may be played.
- Only CD-R discs with JPEG files in ISO 9660 or Joliet format can be played.
- The name of the JPEG file may not be longer than 8 characters and should contain no blank spaces or special characters (. / = +).
- Only a consecutively written multi-session disc can be played. If there is a blank segment in the multi-session disc, the disc can be played only up to the blank segment.
- A maximum of 500 images can be stored on a single CD.
- Kodak Picture CDs are recommended.
- When playing a Kodak Picture CD, only the JPEG files in the pictures folder can be played.
- Kodak Picture CD: The JPEG files in the pictures folder can be played automatically.
- Konica Picture CD: If you want to see the Picture, select the JPEG files in the clips menu.
- Fuji Picture CD: If you want to see the Picture, select the JPEG files in the clips menu.
- QSS Picture CD: The unit may not play QSS Picture CD.
- If the number of files in 1 Disc is over 500, only 500 JPEG files can be played.
- If the number of folders in 1 Disc is over 500, only JPEG files in 500 folders can be played

changing setup menu

Using the Setup Menu

The Setup menu lets you customize your DVD player by allowing you to select various language preferences, set up a parental level, even adjust the player to the type of television screen you have.

1. With the unit in Stop mode, press the **MENU** button on the remote control. Use the **▲/▼** buttons to select **Setup**, then press the **►** or **ENTER** button.

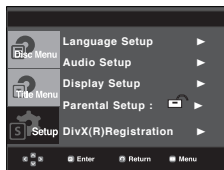

- ① Language Setup: Setup of the Language.
- ② Audio Setup : Setup of the Audio Options.
- ③ Display Setup : Setup of the Display Options. Use to select which type of screen you want to watch and several display options.
- ④ Parental Setup :Setup of the Parental Level. Allows users to set the level necessary to prevent children from viewing unsuitable movies such as those with violence, adult subject matter, etc.
- ⑤ Divx(R) Registration : Please use the Registration code to register this player with the DivX(R) Video OnDemand format. To learn more go to www.divx.com/vod.

2. Press the **▲/▼** buttons to access the different features. Press the **►** or **ENTER** button to access the sub features.
3. To make the setup screen disappear after setting up, press the **MENU** button again.

Note

Depending on the disc, some Setup Menu selections may not work.

Setting Up the Language Features

If you set the player menu, disc menu, audio and subtitle language in advance, they will come up automatically every time you watch a movie.

Using the Player Menu Language


1. With the unit in Stop mode, press the **MENU** button.
2. Press the **▲/▼** buttons to select **Setup**, then press the **►** or **ENTER** button.
3. Press the **▲/▼** buttons to select **Language Setup**, then press the **►** or **ENTER** button.
4. Press the **▲/▼** buttons to select **Player Menu**, then press the **►** or **ENTER** button.
5. Press the **▲/▼** buttons to select the desired language, then press the **►** or **ENTER** button.
 - The language is selected and the screen returns to Language Setup menu.
 - To make the setup menu disappear, press the **MENU** button.



Using the Disc Menu Language

This function changes the text language only on the disc menu screens.

1. With the unit in Stop mode, press the **MENU** button.
2. Press the **▲/▼** buttons to select **Setup**, then press the **►** or **ENTER** button.
3. Press the **▲/▼** buttons to select **Language Setup**, then press the **►** or **ENTER** button.
4. Press the **▲/▼** buttons to select **Disc Menu**, then press the **►** or **ENTER** button.
5. Press the **▲/▼** buttons to select the desired language, then press the **►** or **ENTER** button.
 - If the selected language is not recorded on the disc, the original pre-recorded language is selected. The language is selected and the screen returns to Language Setup menu.
 - To make the setup menu disappear, press the **MENU** button.

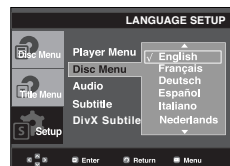


Using the Audio Language

1. With the unit in Stop mode, press the **MENU** button.
2. Press the **▲/▼** buttons to select **Setup**, then press the **►** or **ENTER** button.
3. Press the **▲/▼** buttons to select **Language Setup**, then press the **►** or **ENTER** button.
4. Press the **▲/▼** buttons to select **Audio**, then press the **►** or **ENTER** button.
5. Press the **▲/▼** buttons to select the desired language, then press the **►** or **ENTER** button.
 - Select "Original" if you want the default soundtrack language to be the original language the disc is recorded in.
 - If the selected language is not recorded on the disc, the original pre-recorded language is selected.
 - The language is selected and the screen returns to Language Setup menu.
 - To make the setup menu disappear, press the MENU-button.



Using the Subtitle Language

1. With the unit in Stop mode, press the **MENU** button.
2. Press the **▲/▼** buttons to select **Setup**, then press the **►** or **ENTER** button.
3. Press the **▲/▼** buttons to select **Language Setup**, then press the **►** or **ENTER** button.
4. Press the **▲/▼** buttons to select **Subtitle**, then press the **►** or **ENTER** button.
5. Press the **▲/▼** buttons to select the desired -language, then press the **►** or **ENTER** button.
 - Select "Automatic" if you want the subtitle language to be the same as the language selected as the audio language.
 - Some discs may not contain the language you select as your initial language; in that case the disc will use its original language setting.
 - The language is selected and the screen returns to setup menu.
 - To make the setup menu disappear, press the MENU button.

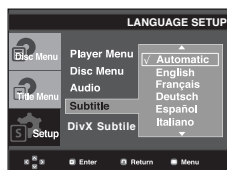

Using the DivX Subtitle Language



1. With the unit in Stop mode, press the **MENU** button.
2. Press the **▲/▼** buttons to select **Setup**, then press the **►** or **ENTER** button.
3. Press the **▲/▼** buttons to select **Language Setup**, then press the **►** or **ENTER** button.
4. Press the **▲/▼** buttons to select **DivX Subtitle**, then press the **►** or **ENTER** button.
5. Press the **▲/▼** buttons to select the desired -language, then press the **►** or **ENTER** button.
 - The language is selected and the screen returns to Language Setup menu.
 - To make the setup menu disappear, press the MENU-button.



Setting Up the Audio Options

Audio Options allows you to setup the audio device and sound status settings depending on the audio system in use.

1. With the unit in Stop mode, press the **MENU** button.
2. Press the **▲/▼** buttons to select **Setup**, then press the **►** or **ENTER** button.
3. Press the **▲/▼** buttons to select **Audio Setup**, then press the **►** or **ENTER** button.
4. Press the **▲/▼** buttons to select the desired item, then press the **►** or **ENTER** button.

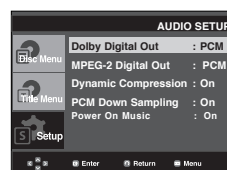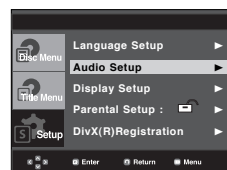

changing setup menu

❶ Dolby Digital Out

- PCM : Converts to PCM(2CH) audio.
- Bitstream : Outputs Dolby Digital or DTS via the digital output. Select Bitstream when connecting to a Dolby Digital or DTS Decoder.

❷ MPEG-2 Digital Out

- PCM : Converts to PCM(2CH) audio.
- Bitstream : Converts to MPEG-2 Digital Bitstream (5.1CH or 8CH). Select Bitstream when using the Digital Audio Output.

❸ Dynamic Compression

- On : To select dynamic compression.
- Off : To select the standard range.

❹ PCM Down Sampling

- On : Select this when the Amplifier connected to the player is not 96KHz compatible. In this case, the 96KHz signals will be down converted to 48KHz.
- Off : Select this when the Amplifier connected to the player is 96KHz compatible. In this case, all signals will be output without any changes.

❺ Power On Music

- On : To turn On Start up music.
- Off : To turn Off Start up music.

Note :

Even when PCM Down sampling is Off

- Some discs will only output down sampled audio through the digital outputs.
- To make the Setup menu disappear, press the MENU-button.
- There is no analog audio output when you play a DTS sound disc.

Manufactured under license from Dolby Laboratories. "Dolby" and the double-D symbol are trademarks of Dolby Laboratories.

"DTS" and "DTS Digital Out" are trademarks of Digital Theater Systems, Inc.

Setting Up the Display Options

Display options enable you to set various video functions of the player.


1. With the unit in Stop mode, press the **MENU** button.
2. Press the **▲/▼** buttons to select **Setup**, then press the **►** or **ENTER** button.
3. Press the **▲/▼** buttons to select **Display Setup**, then press the **►** or **ENTER** button.
4. Press the **▲/▼** buttons to select the desired item, then press the **►** or **ENTER** button.



❶ TV Aspect

Depending on a type of television you have, you may want to adjust the screen setting (aspect ratio).

- 4:3 Letter Box : Select when you want to see the total 16:9 ratio screen DVD supplies, even though you have a TV with a 4:3 ratio screen. Black bars will appear at the top and bottom of the screen.
- 4:3 Pan&Scan : Select this for conventional size TVs when you want to see the central portion of the 16:9 screen. (Extreme left and right side of movie picture will be cut off.)
- 16:9 Wide : You can view the full 16:9 picture on your wide screen TV.

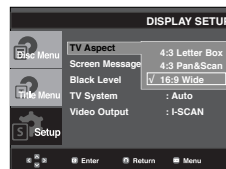

❷ Screen Messages


Use to turn on-screen messages On or Off.

❸ Black Level

Adjusts the brightness of the screen. (On or Off) It does not function in PAL & Auto mode.

4 TV System


- Auto
- NTSC : In case of using NTSC disc
- If your TV system only has PAL-Video input, you must choose "PAL". When you choose "PAL", Interlace output format is PAL 60 Hz output.
- If your TV system only has NTSC, input you must choose "NTSC".
- PAL : In case of using PAL disc
- If your TV system only has NTSC-Video input, you must choose "NTSC".
- If your TV system only has PAL input, you must choose "PAL".

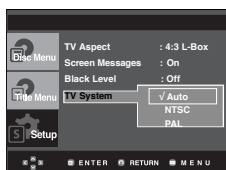

5 Video Output

Select Video Output.

- I-SCAN : Select when you want to use Component Interlace (525i) Out.
- P-SCAN : Select when you want to use Component Progressive (525p) Out.
- If the Yes/No selection in the Display Setup sub Menu is not made within 10 seconds, the screen returns to the previous menu.

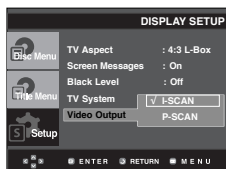


- Consult your TV User's Manual to find out if your TV supports Progressive Scan. If Progressive Scan is supported, follow the TV User's Manual regarding Progressive Scan settings in the TV's menu system.
- If Video Output is set incorrectly, the screen may be blocked.

Setting Up the Parental Control

The Parental Control function works in conjunction with DVDs that have been assigned a rating, which helps you control the types of DVDs that your family watches. There are up to 8 rating levels on a disc.

Setting Up the Rating Level


1. With the unit in Stop mode, press the **MENU** button.
2. Press the **▲/▼** buttons to select **Setup**, then press the **▶** or **ENTER** button.

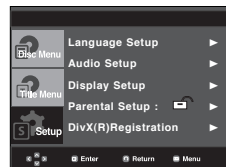


3. Press the **▲/▼** buttons to select **Parental Setup**, then press the **▶** or **ENTER** button.



4. Press the **▲/▼** buttons to select **Rating Level**, then press the **▶** or **ENTER** button.

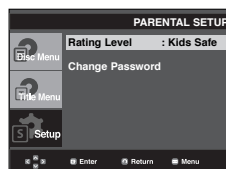


5. Enter your password.
Press the **▲/▼** button. By default then press the **ENTER**, password-is set to 0000.
- Please Change password to other than 0000 to parental control function activated.

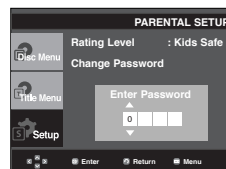

changing setup menu


- Press the ▲/▼ buttons to select the Rating Level you want, then press the ► or ENTER button.
e.g) Setting up in **Kids Safe**.

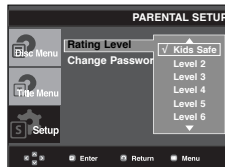


To make the setup menu disappear, press the MENU button. For example, if you select up to Level 6, discs that contain Level 7,8 will not play.

Changing the Password


- With the unit in Stop mode, press the **MENU** button.
- Press the ▲/▼ buttons to select **Setup**, then press the ► or ENTER button.

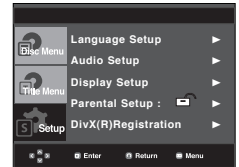



- Press the ▲/▼ buttons to select **Parental Setup**, then press the ► or ENTER button. The Enter Password screen appears. Enter your password.

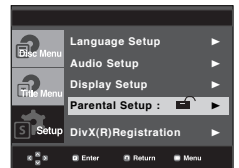

- Press the ▲/▼ button to select **Change Password**, then press the ► or ENTER button. Enter your new password again.

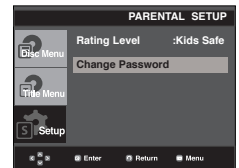

- The enter **Password** screen appear. Enter your current word (default password is 0000), then Enter your new password twice.

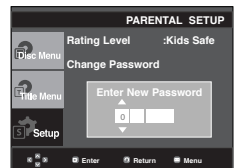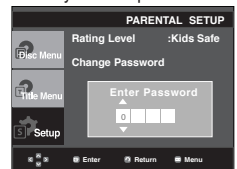

Note

If you have forgotten your password, see "Forgot Password" in the Troubleshooting Guide.

Firmware upgrade

Introduction

Samsung will often support the software upgrade to improve the performance of this unit to the latest status, through Samsung Internet Site (www.samsung.com).

Because the specially new mpeg4 codec continues and it is appearing. What improvements are made depends on the upgrade software you are using as well as the software that your DVD-player contained before the upgrade.

How to make an upgrade disc

Write the downloaded file onto a blank CD-R or CD-RW disc, using the following settings:


1. You have to download a new file through Download Center of Samsung Internet Site (www.samsung.com).
2. Write the file to Disc using CD-RW of your computer.

Note

- File System CD-ROM ISO Level
- Character set ISO 9660
- Finalized, single session
- Write speed low


Upgrade procedure

1. Open the disc tray. Place the disc on the tray. Close the tray. The Firmware upgrade screen appears.

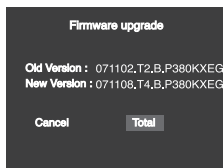

Firmware upgrade appears on the display

2. Press the ◀/▶ buttons to select **Total**, then press the ENTER button.

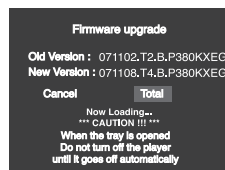

Firmware upgrade starts

- In the middle of the writing, the tray will open automatically. After taking out the disc, please wait for about 2 minutes.
- If the unit was successfully updated, the unit will turn off and on after closing the tray automatically. When the unit turns on, this screen will display.

3. Press the ▲/▼ buttons to select the desired language



Note

- If the "Select Menu Language" doesn't appear, please contact to "Samsung Service Center".
- Do not press any button and unplug the power cord during upgrade.
- The upgrade procedure may change, refer to the web site (www.samsung.com).

Troubleshooting

Before requesting service (troubleshooting), please check the following.

Problem	Action	Page
No operations can be performed with the remote control.	• Check the batteries in the remote control. They may need replacing. • Operate the remote control at a distance of no more than 20 feet. • Remove batteries and hold down one or more buttons for several minutes to drain the microprocessor inside the remote control to reset it. Reinstall batteries and try to operate the remote control again.	P3
Disc does not play.	• Ensure that the disc is installed with the label side facing up. • Check the region number of the DVD.	P5
The  icon appears on screen.	• The features or action cannot be completed at this time because: 1. The DVD's software restricts it. 2. The DVD's software doesn't support the feature (e.g., angles). 3. The feature is not available at the moment. 4. You've requested a title or chapter number or search time that is out of range.	
Disc Menu doesn't appear.	• Check if the disc has a Menu.	
Play mode differs from the Setup Menu selection.	• Some of the functions selected in the Setup Menu may not work properly if the disc is not encoded with the corresponding function.	P24~28
The screen ratio cannot be changed.	• The Screen Ratio is fixed on your DVDs.	P26~27
No audio.	• Make sure you have selected the correct Digital Output in the Audio Options Menu.	P25~26
The screen is blocked	• Press the ► button (in front panel) for more than 5 seconds under no disc inside. All settings will revert to the factory settings.	P14
Forgot password	• Press the ► button (in front panel) for more than 5 seconds under no disc inside. All settings including the password will revert to the factory settings. Don't use this unless absolutely necessary.	P27
If you experience other problems.	• Go to the contents and find the section of the instruction book that contains the explanations regarding the current problem, and follow the procedure once again. • If the problem still cannot be solved, please contact your nearest authorized service center.	
The picture is noisy or distorted	• Make sure that the disc is not dirty or scratched. • Clean the disc.	P2

Specifications

General	Power Requirements	AC 110-240 V, 50/60 Hz
	Power Consumption	8 W
	Weight	1.3 Kg
	Dimensions	360mm (W) X 203mm (D) X 37mm (H)
	Operating Temperature Range	+5°C to +35°C
	Operating Humidity Range	10 % to 75 %
Disc	DVD (DIGITAL VERSATILE DISC)	Reading Speed : 3.49 ~ 4.06 m/sec. Approx. Play Time (Single Sided, Single Layer Disc) : 135 min.
	CD : 12Cm (COMPACT DISC)	Reading Speed : 4.8 ~ 5.6 m/sec. Maximum Play Time : 74 min.
	CD : 8Cm (COMPACT DISC)	Reading Speed : 4.8 ~ 5.6 m/sec. Maximum Play Time : 20 min.
	VCD : 12Cm	Reading Speed : 4.8 ~ 5.6 m/sec. Maximum Play Time : 74 min. (Video + Audio)
Video Output	Composite Video	1 channel : 1.0 Vp-p (75 Ω load)
	Component Video	Y : 1.0 Vp-p (75 Ω load) Pr : 0.70 Vp-p (75 Ω load) Pb : 0.70 Vp-p (75 Ω load)
Audio Output	* Maximum Output level	2 Vrms
	Output Terminal	RCA
	Digital Audio output	Coaxial (S/PDIF)
	*Frequency Response	20Hz ~ 20Khz

*: Nominal specification

- Samsung Electronics Co., Ltd reserves the right to change the specifications with out notice.
- Weight and dimensions are approximate.

Contact SAMSUNG WORLD WIDE

If you have any questions or comments relating to Samsung products, please contact the SAMSUNG customer care center.

Region	Country	Contact Center ☎	Web Site
North America	CANADA	1-800-SAMSUNG(726-7864)	www.samsung.com/ca
	MEXICO	01-800-SAMSUNG(726-7864)	www.samsung.com/mx
	U.S.A	1-800-SAMSUNG(726-7864)	www.samsung.com/us
Latin America	ARGENTINE	0800-333-3733	www.samsung.com/ar
	BRAZIL	0800-124-421, 4004-0000	www.samsung.com/br
	CHILE	800-SAMSUNG(726-7864)	www.samsung.com/cl
	NICARAGUA	00-1800-5077267	www.samsung.com/latin
	HONDURAS	800-7919267	www.samsung.com/latin
	COSTA RICA	0-800-507-7267	www.samsung.com/latin
	ECUADOR	1-800-10-7267	www.samsung.com/latin
	EL SALVADOR	800-6225	www.samsung.com/latin
	GUATEMALA	1-800-299-0013	www.samsung.com/latin
	JAMAICA	1-800-234-7267	www.samsung.com/latin
	PANAMA	800-7267	www.samsung.com/latin
	PUERTO RICO	1-800-682-3180	www.samsung.com/latin
	REP. DOMINICA	1-800-751-2676	www.samsung.com/latin
	TRINIDAD & TOBAGO	1-800-SAMSUNG(726-7864)	www.samsung.com/latin
	VENEZUELA	0-800-100-5303	www.samsung.com/latin
Europe	COLOMBIA	01-8000112112	www.samsung.co.co
	BELGIUM	02 201 2418	www.samsung.com/be
	CZECH REPUBLIC	800-726-786 (800 - SAMSUNG)	www.samsung.com/cz
	DENMARK	70 70 19 70	www.samsung.com/dk
	FINLAND	030-6227 515	www.samsung.com/fi
	FRANCE	3260 SAMSUNG (€ 0,15/Min) 08 25 08 65 65 (€ 0,15/Min)	www.samsung.com/fr
	GERMANY	01805 - SAMSUNG(726-7864 € 0,14/Min)	www.samsung.de
	HUNGARY	06-80-SAMSUNG(726-7864)	www.samsung.com/hu
	ITALIA	800-SAMSUNG(726-7864)	www.samsung.com/it
	LUXEMBURG	02 261 03 710	www.samsung.com/lu
	NETHERLANDS	0900-SAMSUNG (726-7864 € 0,10/Min)	www.samsung.com/nl
	NORWAY	815-56 480	www.samsung.com/no
	POLAND	0 801 801 881, 022-607-93-33	www.samsung.com/pl
	PORTUGAL	80820-SAMSUNG(726-7864)	www.samsung.com/pt
	SLOVAKIA	0800-SAMSUNG(726-7864)	www.samsung.com/sk
	SPAIN	902-1-SAMSU(72678)	www.samsung.com/es
	SWEDEN	0771-400 200	www.samsung.com/se
	U.K	0845 SAMSUNG (7267864)	www.samsung.com/uk
	EIRE	0818 717 100	www.samsung.com/ie
CIS	AUSTRIA	0800-SAMSUNG(726-7864)	www.samsung.com/at
	SWITZERLAND	0800-SAMSUNG(726-7864)	www.samsung.com/ch
	RUSSIA	8-800-555-55-55	www.samsung.ru
	KAZAKHSTAN	8-10-800-500-55-500	www.samsung.com/kz_ru
	UZBEKISTAN	8-10-800-500-55-500	www.samsung.com/kz_ru
	KYRGYZSTAN	00-800-500-55-500	
	TADJIKISTAN	8-10-800-500-55-500	
	UKRAINE	8-800-502-0000	www.samsung.ua
	LITHUANIA	8-800-77777	www.samsung.lt
	LATVIA	8000-7267	www.samsung.com/lv
Asia Pacific	ESTONIA	800-7267	www.samsung.ee
	AUSTRALIA	1300 362 603	www.samsung.com/au
	NEW ZEALAND	0800 SAMSUNG (0800 726 786)	www.samsung.com/nz
	CHINA	800-810-5858, 400-810-5858, 010-6475 1880	www.samsung.com/cn
	HONG KONG	3698-4698	www.samsung.com/hk
	INDIA	3030 8282, 1800 110011, 1-800-3000-8282	www.samsung.com/in
	INDONESIA	0800-112-8888	www.samsung.com/id
	JAPAN	0120-327-527	www.samsung.com/jp
	MALAYSIA	1800-88-9999	www.samsung.com/my
	PHILIPPINES	1800-10-SAMSUNG(726-7864)	www.samsung.com/ph
	SINGAPORE	1800-SAMSUNG(726-7864)	www.samsung.com/sg
	THAILAND	1800-29-3232, 02-689-3232	www.samsung.com/th
Middle East & Africa	TAIWAN	0800-329-999	www.samsung.com/tw
	VIETNAM	1 800 588 889	www.samsung.com/vn
	TURKEY	444 77 11	www.samsung.com/tr
	SOUTH AFRICA	0860-SAMSUNG(726-7864)	www.samsung.com/za
	U.A.E	800-SAMSUNG (726-7864), 8000-4726	www.samsung.com/ae

